ID+2.5" Square Housing



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.





POWER OFF


POWER ON




LUMINAIRE MUST BE INSTALLED PRIOR TO DRYWALL CEILING. ALL GRID LUMINAIRES MUST BE SECURED TO STRUCTURE ABOVE.


COMPONENT KEY

NON-EMERGENCY THERMALLY PROTECTED, NON-IC

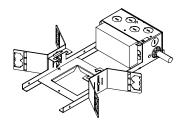

EMERGENCY REMOTE TEST SWITCH, NON-IC

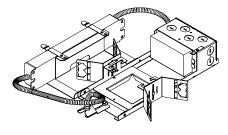


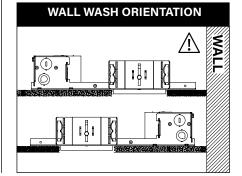

BAR HANGERS SOLD SEPARATELY


OPTIONAL

IC/CP

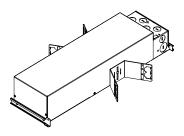






KEEP SHADED AREA FREE FROM OBSTRUCTION ABOVE CEILING

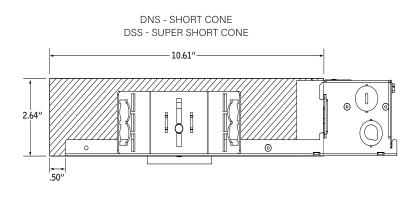



GRID - 1/2" CONDUIT & CLIP (BY OTHERS)

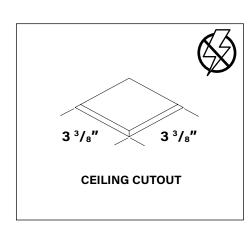


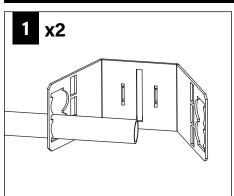

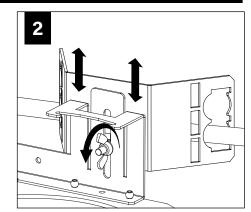


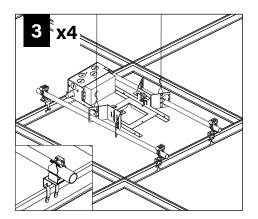

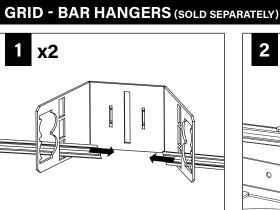

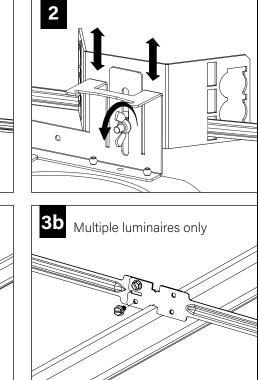



DRYWALL - BAR HANGERS (SOLD SEPARATELY)

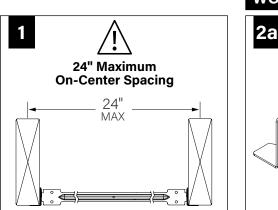


WOOD STUDS

3a x4

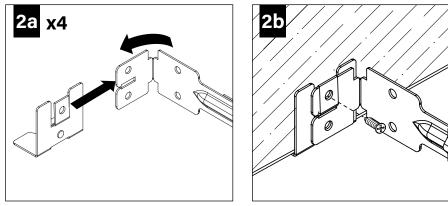

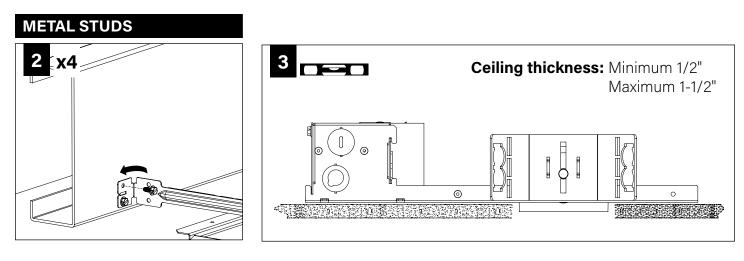

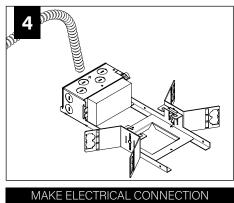

EMERGENCY - REMOTE TEST SWITCH

3.75" 2 3 6.934" 0 Release test switch from bracket prior to 3.559" installation Ø 0.75" 4 6 $\overline{}$ \bigcirc Variat Adjust test switch until Battery Unit Connector Inside canopy is flush with ceiling

ABOVE CEILING ACCESS REQUIRED



DRIVER SERVICE



TO PREVENT ELECTRICAL SHOCK, DISCONNECT ELECTRICAL SUPPLY BEFORE SERVICING

