



BEFORE YOU BEGIN

- Configurations are run specific, please consult factory drawings before beginning installation.
- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS



POWER OFF




POWER ON


COMPONENT KEY

FOCAL POINT


TRUBLADE

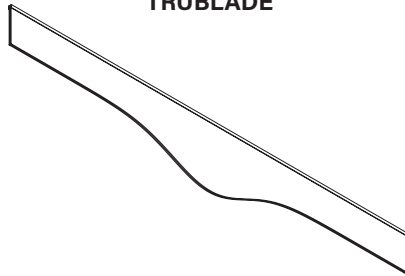

SEEM 1 ACOUSTIC

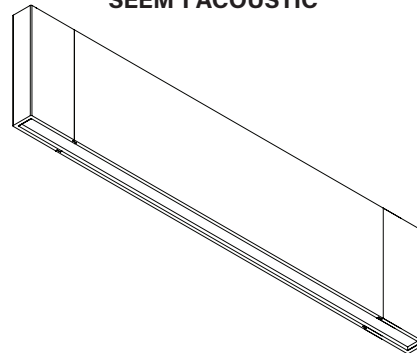


INSTALLATION TOOL SHIPPED IN PACKAGING

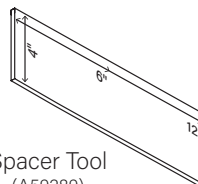


Spacer Tool
(A59289)

STRUTKLIP HARDWARE SHIPPED IN BAG

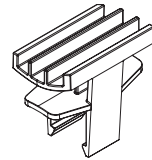


StrutKlip
(A55717-01)

AIRCRAFT CABLE SUSPENSION HARDWARE SHIPPED IN BAG



Aircraft Cable
with Stop Sleeve
(73060-XX)




Cable
Coupler
(73650)

DIRECT TO STRUT HARDWARE SHIPPED IN BAG



Bolt
1/4-20 x 4.5"
(700547)



Flat Washer
1.5" x .281" x .062"
(75221)



**SEEM 1 ACOUSTIC LUMINAIRES
MUST BE INSTALLED PRIOR TO
INSTALLING TRUBLADE BAFFLES**




**SEEM 1 ACOUSTIC DIRECT TO STRUT INSTALLATION - PG 4
SEEM 1 ACOUSTIC AIRCRAFT CABLE INSTALLATION - PG 5
TRUBLADE STRUTKLIP INSTALLATION - PG 6
TRUBLADE MAGNET INSTALLATION - PG 7
TRUBLADE AIRCRAFT CABLE INSTALLATION - PG 8
MULTIPLE ARRAY INSTALLATION - PG 9**

FACTORY DRAWINGS




CONSULT FACTORY DRAWINGS FOR MOUNTING LOCATIONS AND OTHER INSTALLATION DIMENSIONS

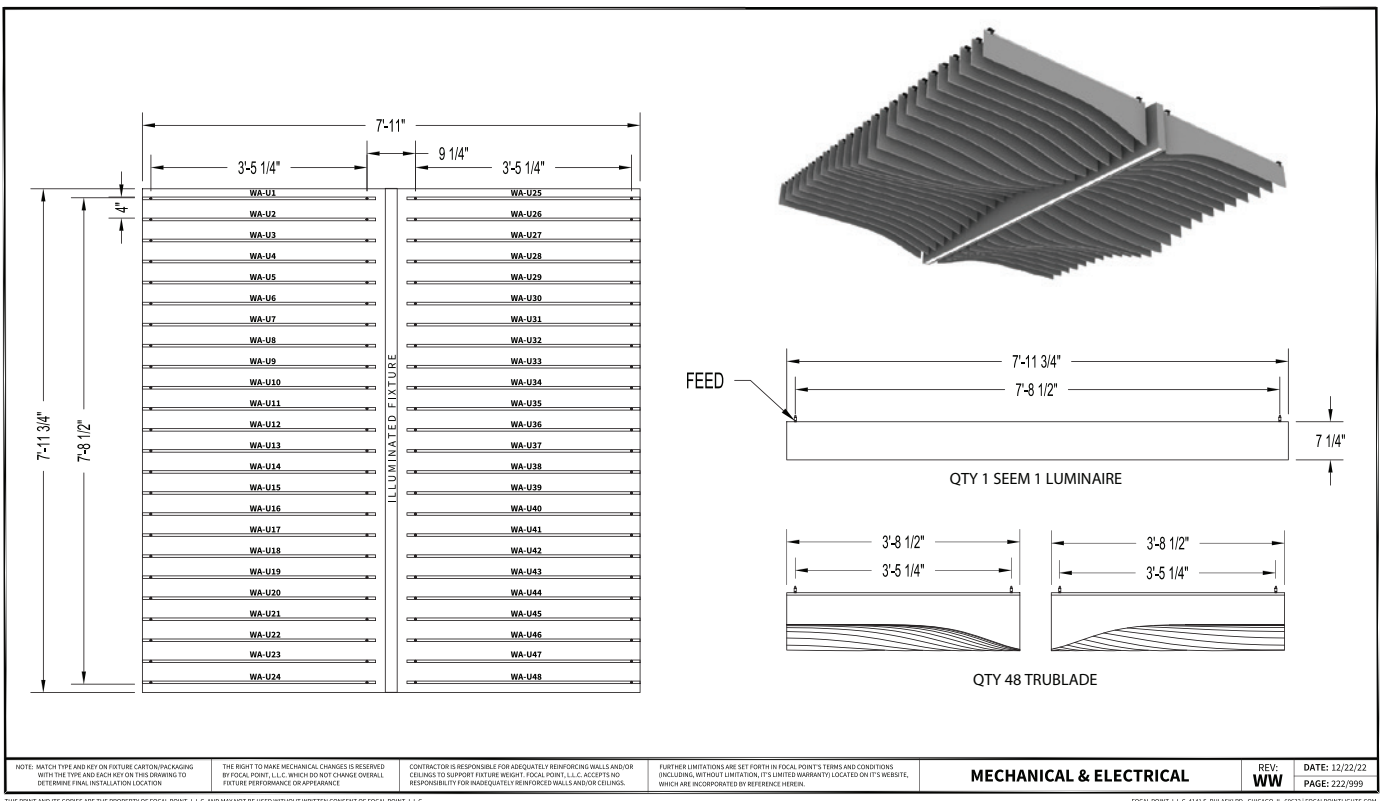


TRUBLADE INSTALLATION SEQUENCE

Each TruBlade baffle is labeled with a fixture key that is affixed to the extrusion. **DO NOT REMOVE LABEL.**

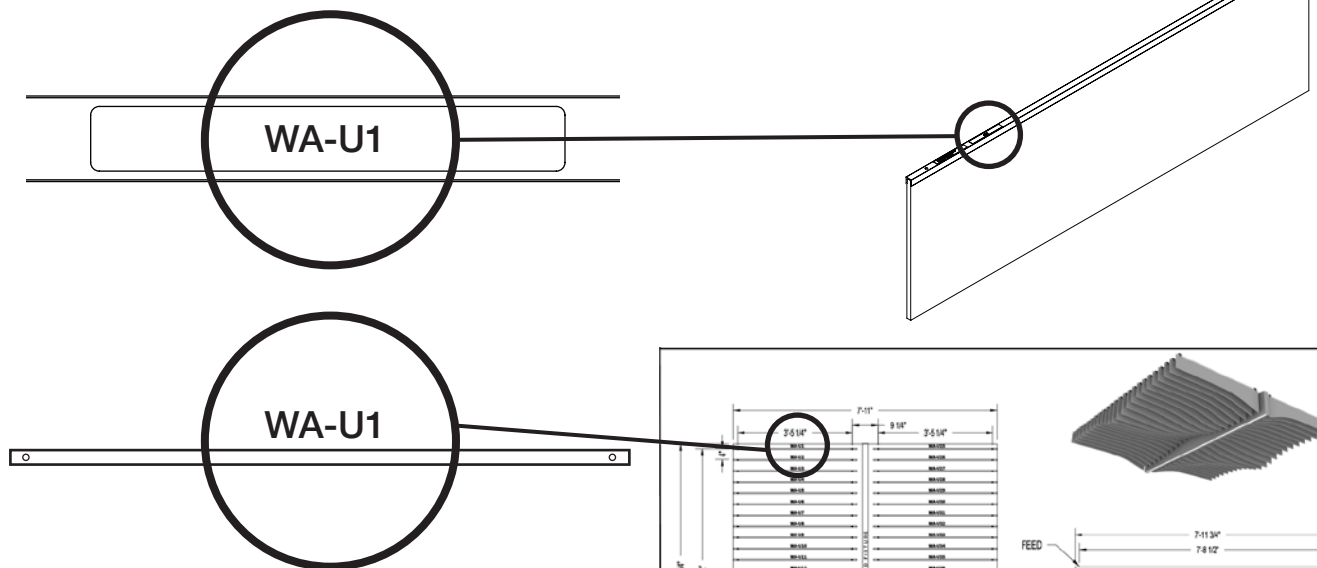



Match the fixture key on the factory drawing with the corresponding fixture key on the TruBlade baffle to determine the installation sequence.

Ensure all TruBlade baffles are installed with the fixture key facing the same direction.

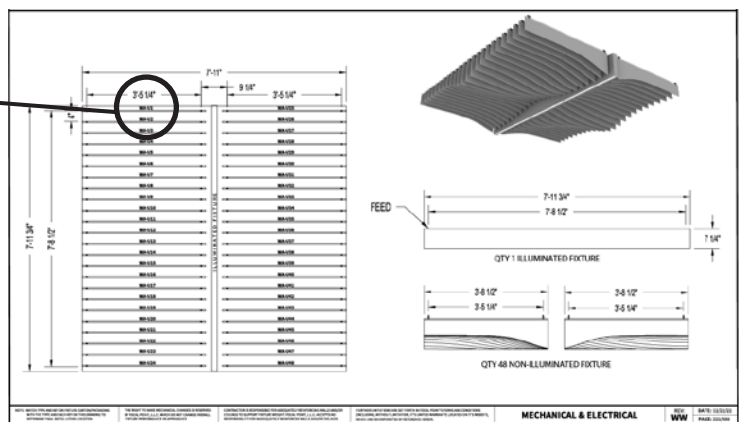


SPACER TOOL

Use the provided spacer tool to evenly space and install TruBlade baffles.

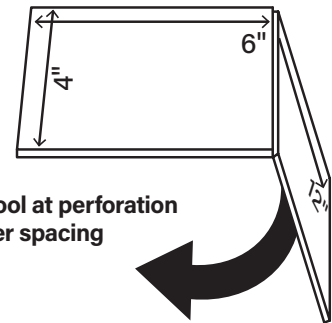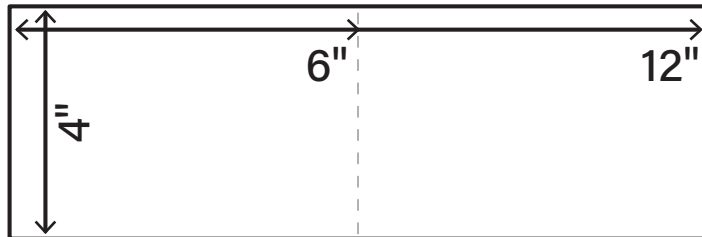


Bend spacer tool at perforation
for 6" on-center spacing


4" on-center spacing

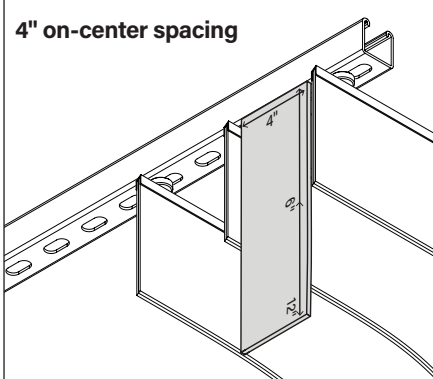






6" on-center spacing

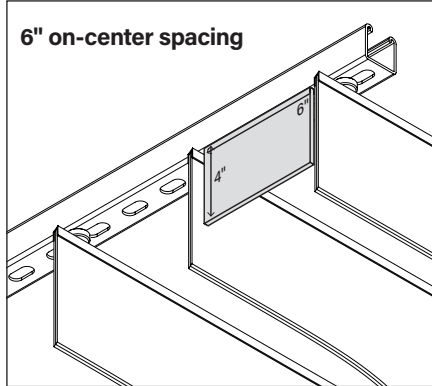


12" on-center spacing

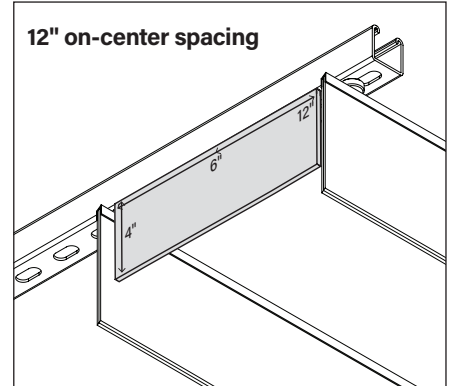


STRUT INSTALLATION

INSTALLATION METHOD	STRUT ORIENTATION
Seem 1 Acoustic Direct to Strut	Strut can be installed in "n" or "u" orientation 
Seem 1 Acoustic Aircraft Cable	Strut can be installed in "n" or "u" orientation 
TruBlade StrutKlip	Strut must be installed in "n" orientation 
TruBlade Magnet	Strut must be installed in "u" orientation 
TruBlade Aircraft Cable	Strut can be installed in "n" or "u" orientation 

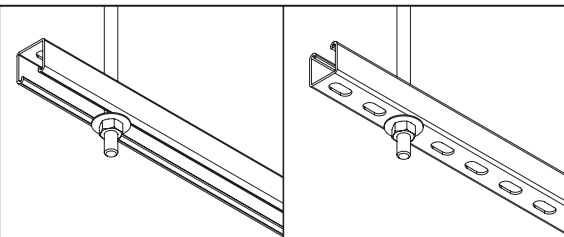

AVOID INSTALLING STRUT SUSPENSION RODS
AND BOLTS AT MOUNTING LOCATIONS

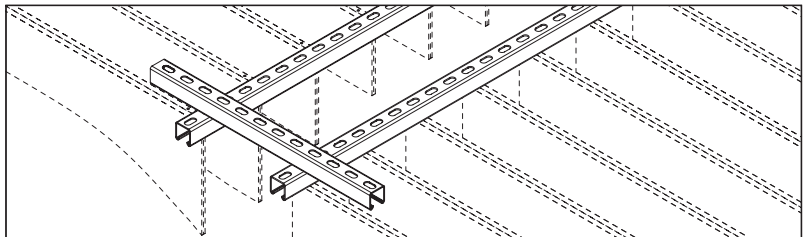


STRUT FOR SEEM 1 ACOUSTIC INSTALLS PERPENDICULARLY
ABOVE STRUT FOR TRUBLADE BAFFLES

SEEM 1 ACOUSTIC DIRECT TO STRUT INSTALLATION




**STRUT CAN BE INSTALLED
IN "n" OR "u" ORIENTATION**

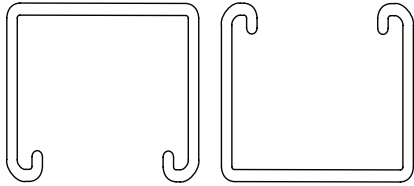


**AVOID INSTALLING STRUT
SUSPENSION RODS AND BOLTS AT
SEEM 1 ACOUSTIC MOUNTING LOCATIONS**



**FOR CONTINUOUS RUNS (MORA CREATE)
FOLLOW FOCAL POINT INSTRUCTIONS
FOR SEEM 1 ACOUSTIC
DIRECT TO STRUT JOINING
SEE IS0750**

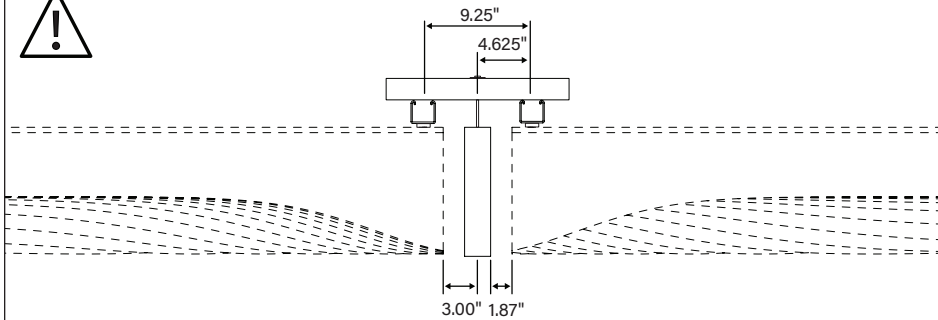


Center Seem 1 Acoustic between TruBlade baffles. Refer to factory drawings for specific installation dimensions.

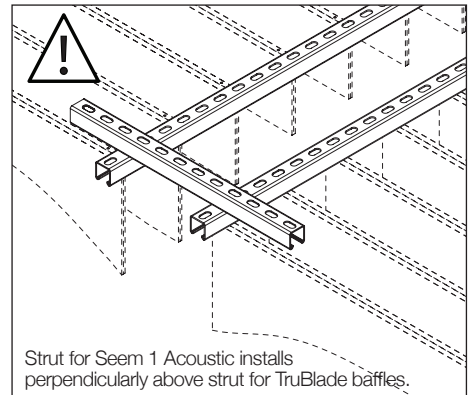


Strut for Seem 1 Acoustic installs perpendicularly above strut for TruBlade baffles.


1

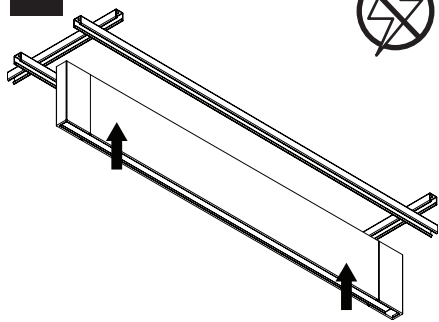


2a

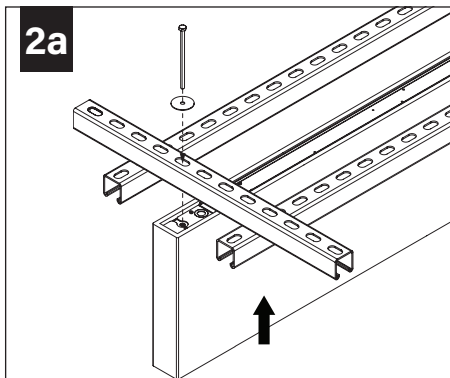


2b

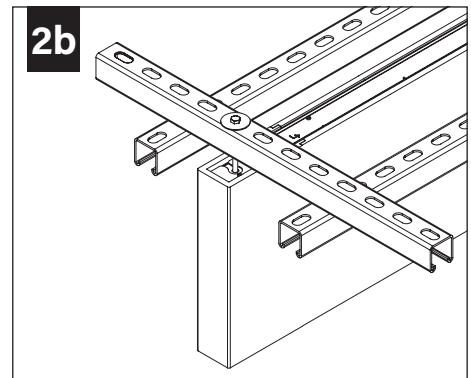


3a

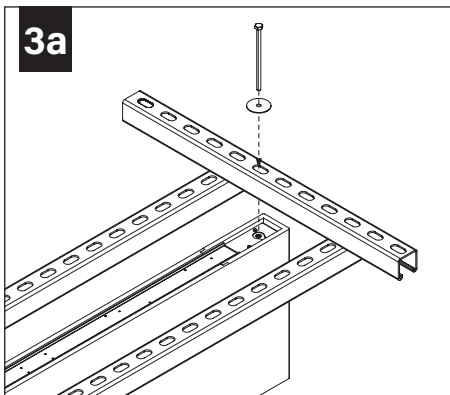

3b

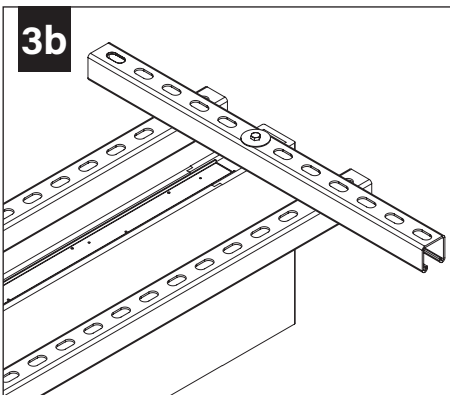


4

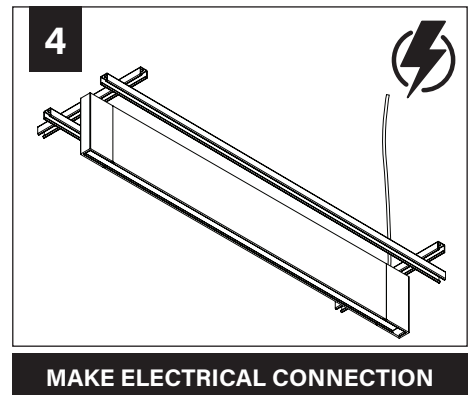

MAKE ELECTRICAL CONNECTION

5

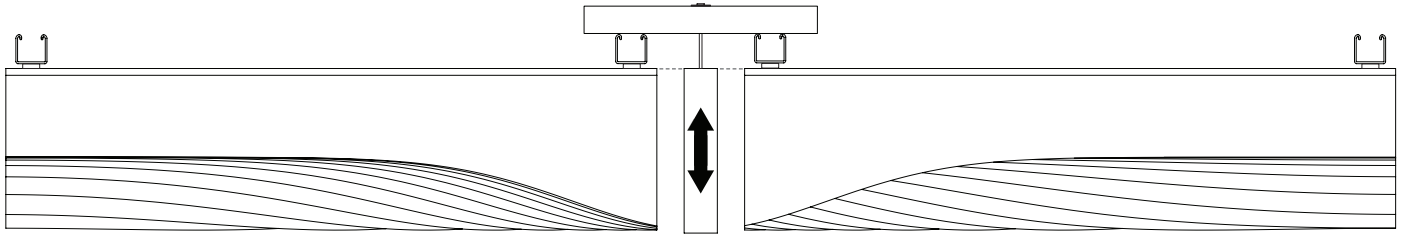


Adjust mounting bolt depth so that the top of Seem 1 Acoustic is flush with the top of TruBlade baffles

SEEM 1 ACOUSTIC AIRCRAFT CABLE INSTALLATION




**STRUT CAN BE INSTALLED
IN "n" OR "u" ORIENTATION**

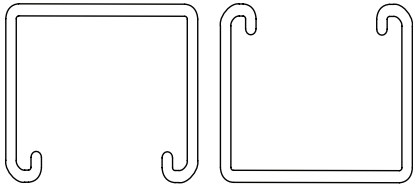


**AVOID INSTALLING STRUT
SUSPENSION RODS AND BOLTS AT
SEEM 1 ACOUSTIC MOUNTING LOCATIONS**



**FOLLOW FOCAL POINT INSTRUCTIONS
FOR SEEM 1 ACOUSTIC
SUSPENDED JOINING
SEE IS0714**

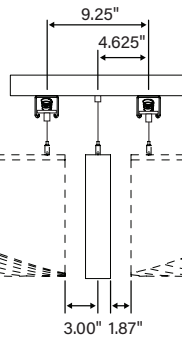


Center Seem 1 Acoustic between TruBlade baffles. Refer to factory drawings for specific installation dimensions.

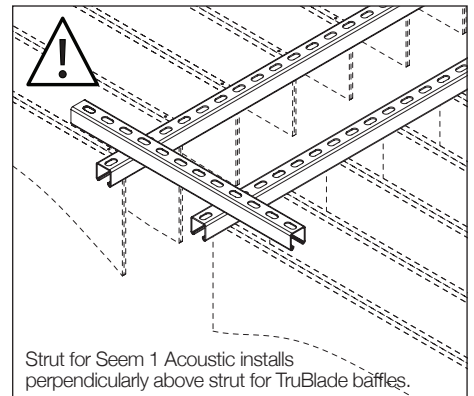

Strut for Seem 1 Acoustic installs perpendicularly above strut for TruBlade baffles.

1

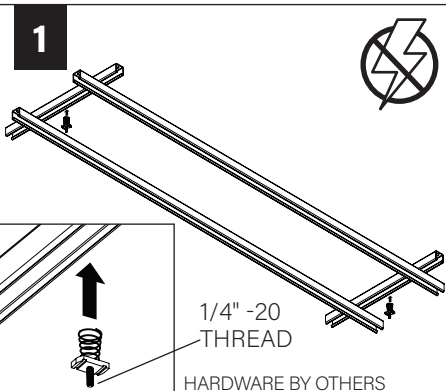


2a







2b














3

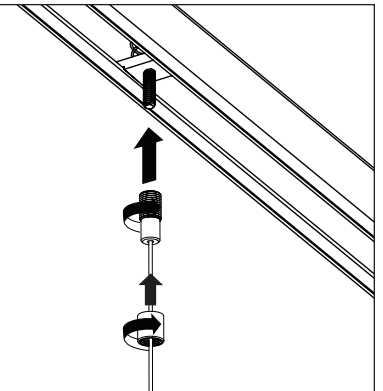


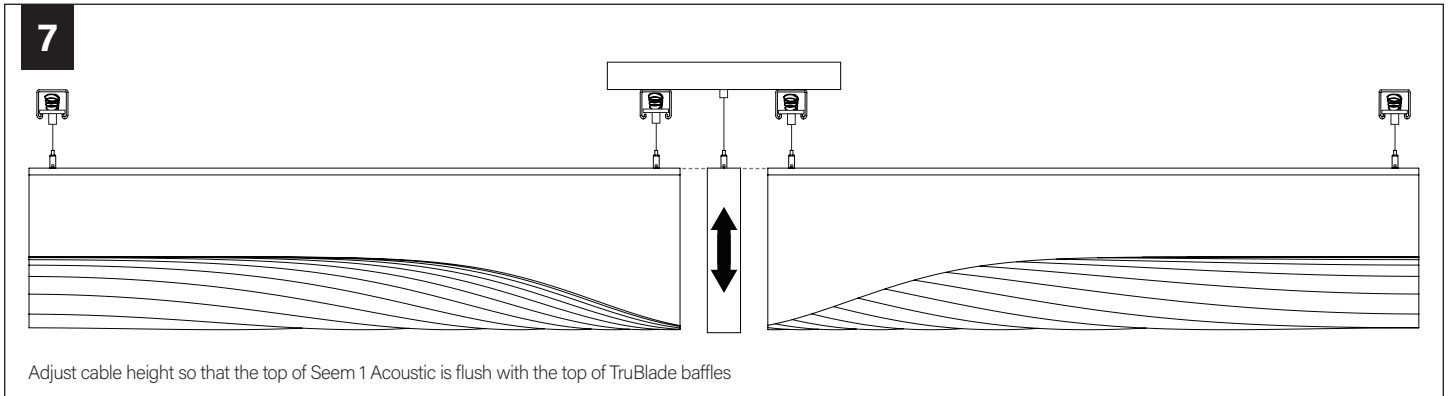
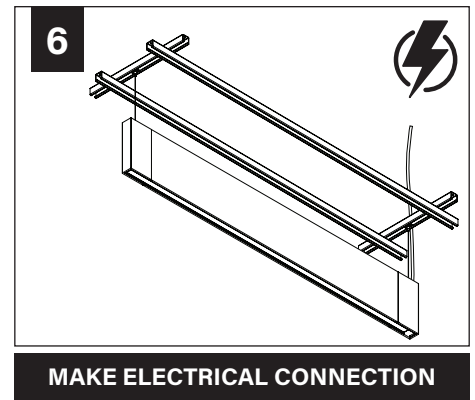
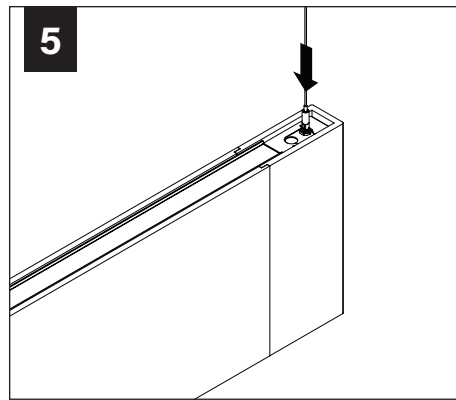
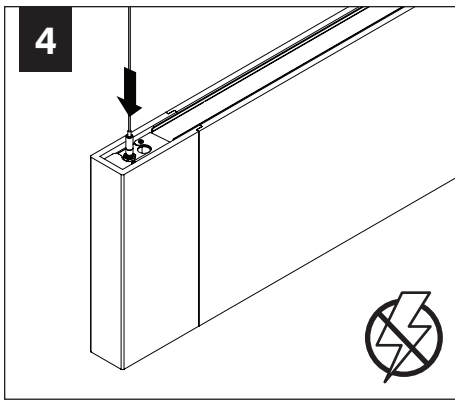


TRUBLADE STRUTKLIP INSTALLATION

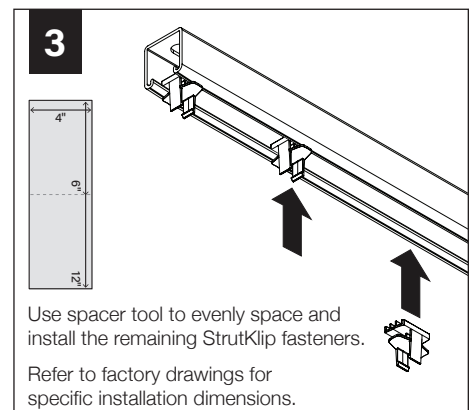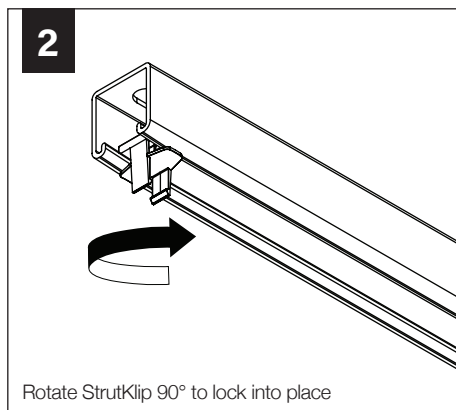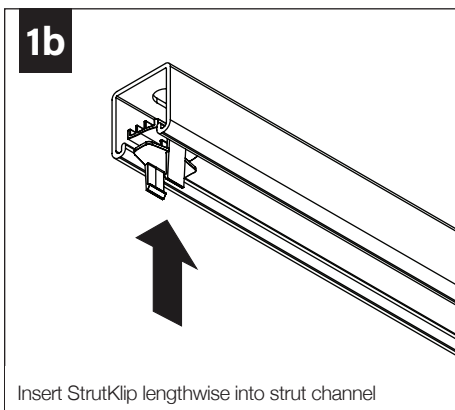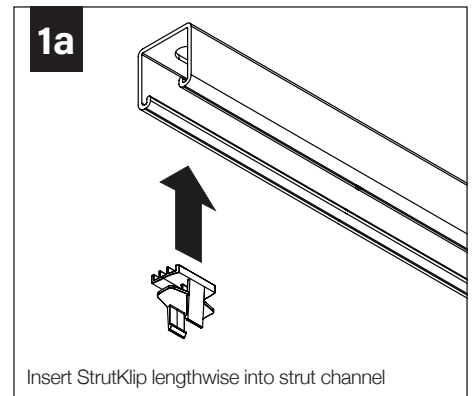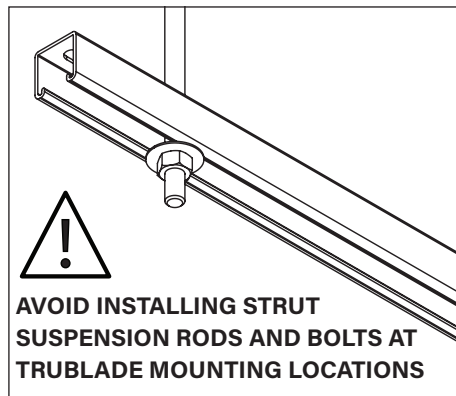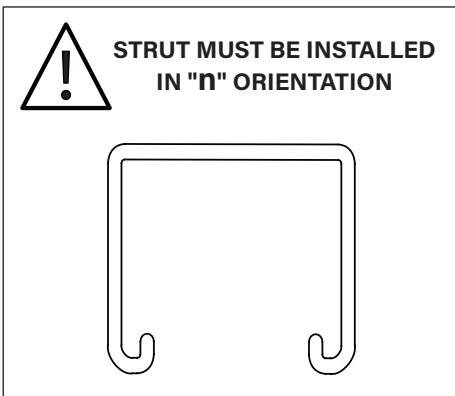


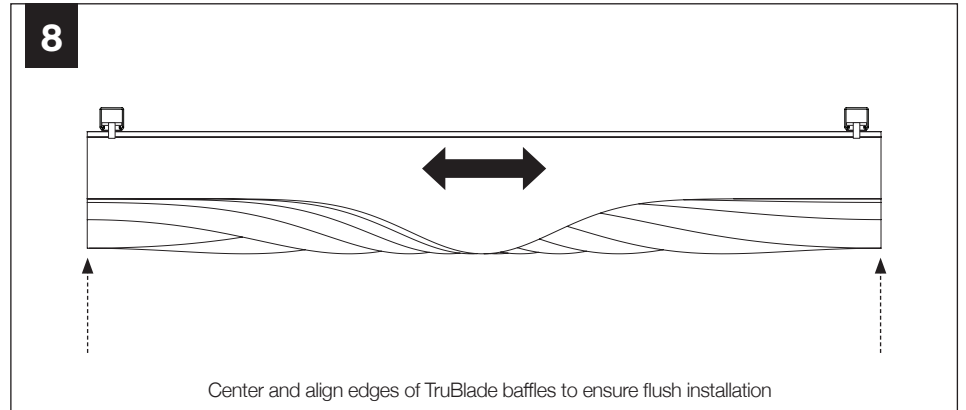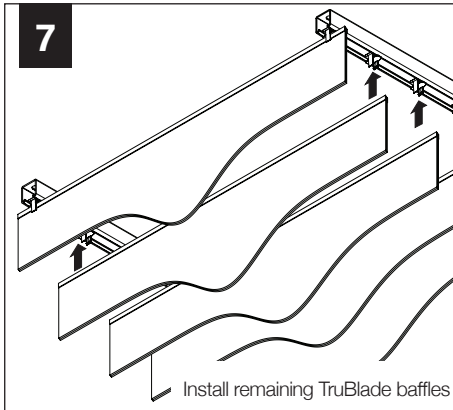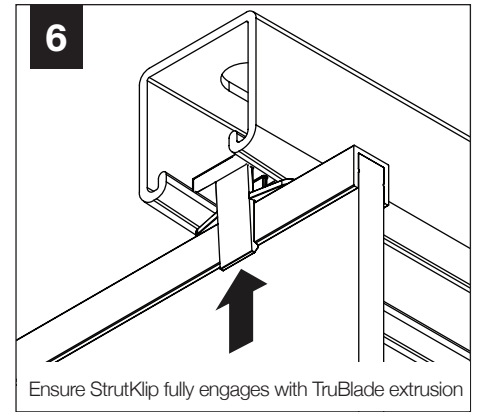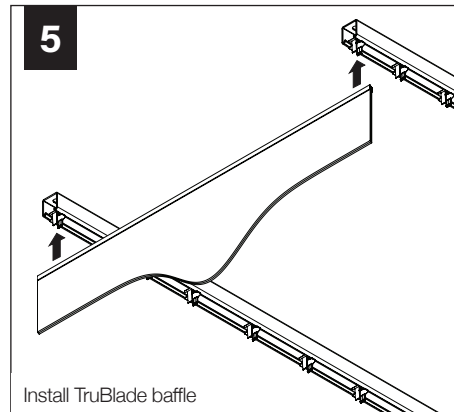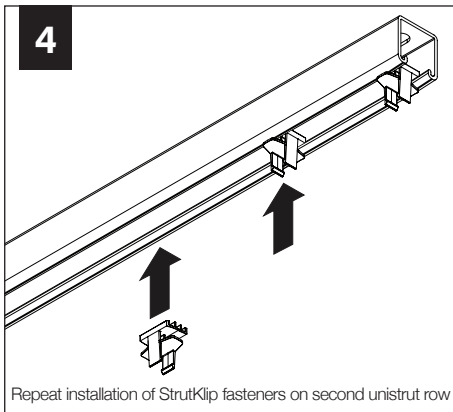

TRUBLADE MAGNET INSTALLATION

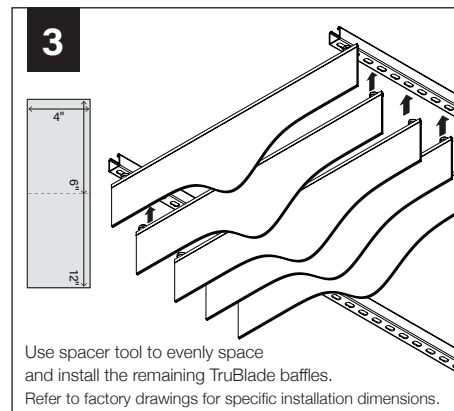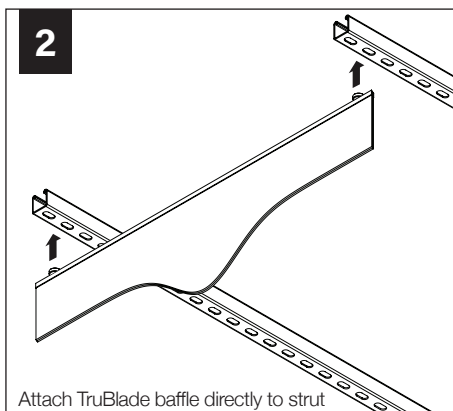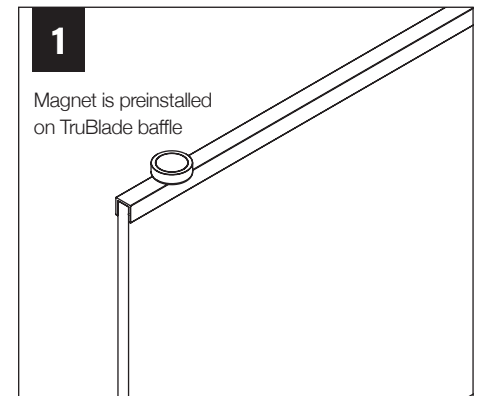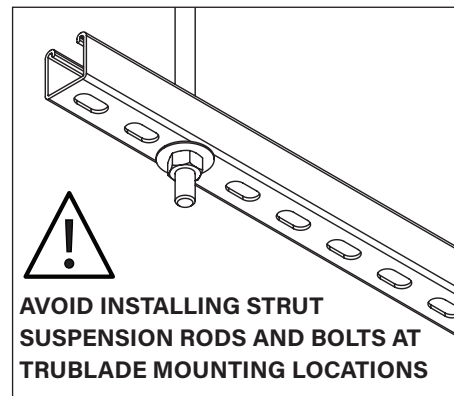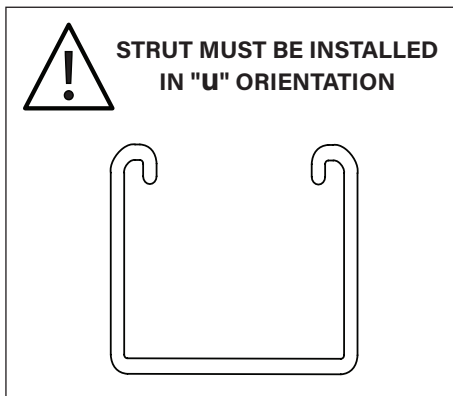

4

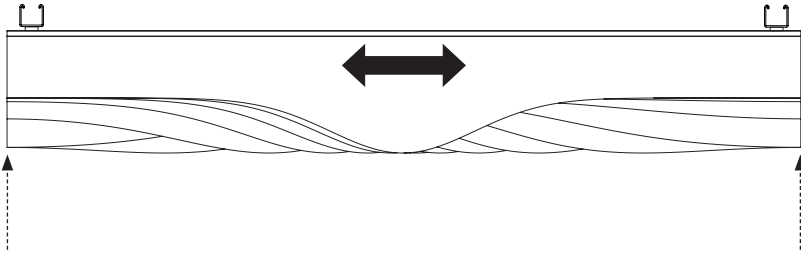


Center and align edges of TruBlade baffles to ensure flush installation

TRUBLADE AIRCRAFT CABLE INSTALLATION




**STRUT CAN BE INSTALLED
IN "n" OR "u" ORIENTATION**

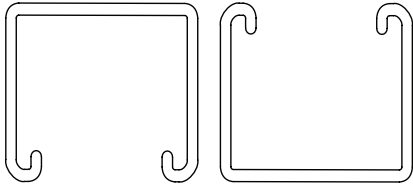

**AVOID INSTALLING STRUT
SUSPENSION RODS AND BOLTS AT
TRUBLADE MOUNTING LOCATIONS**


1

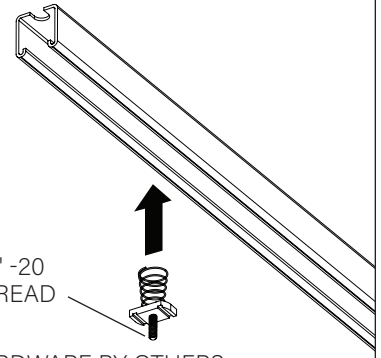

1/4\" -20
THREAD

HARDWARE BY OTHERS

2

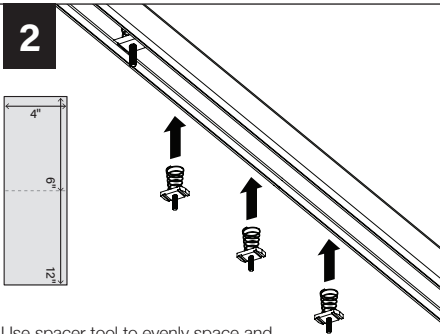

Use spacer tool to evenly space and
install the remaining suspension points.
Refer to submittal drawings for specific installation dimensions.


3a




3b




4

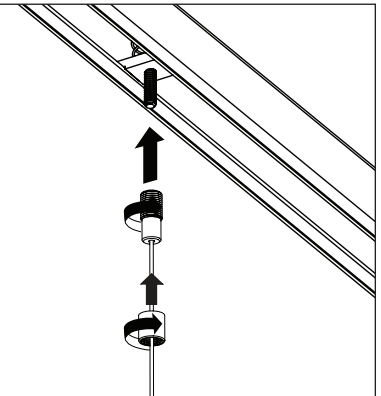

5

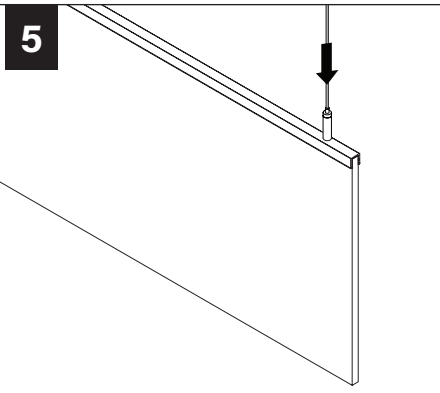


6

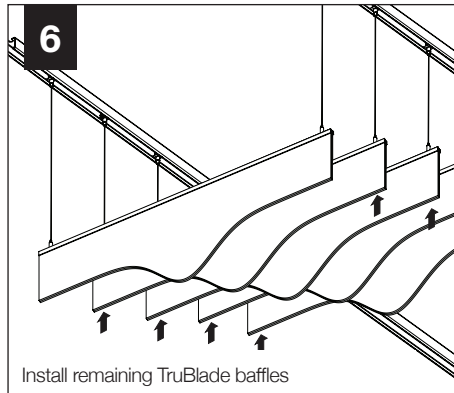

Install remaining TruBlade baffles

7

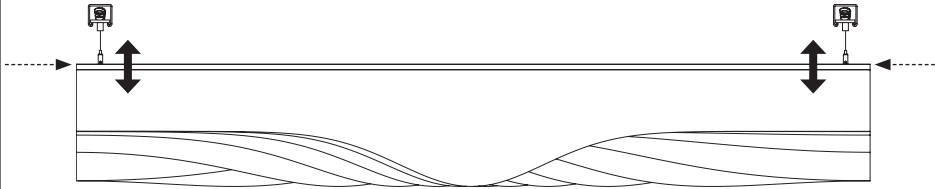

Level and align top of TruBlade baffles to ensure flush installation

MULTIPLE ARRAY INSTALLATION

