

Seem® 4 Behavioral Health

TRSM4L-XFF | MUD-IN DRYWALL



FOCAL POINT®



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF




POWER ON

COMPONENT KEY


FOCAL POINT

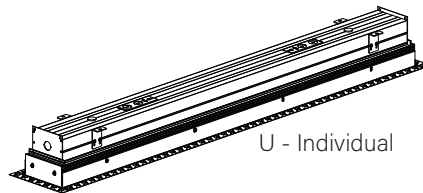


U - Individual

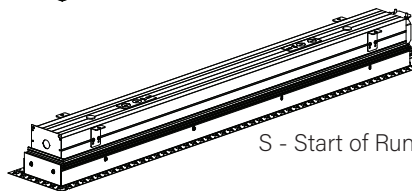


S - Start of Run

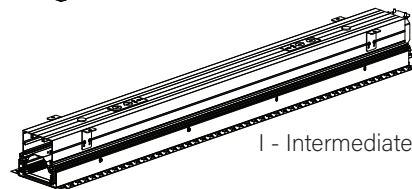

I - Intermediate

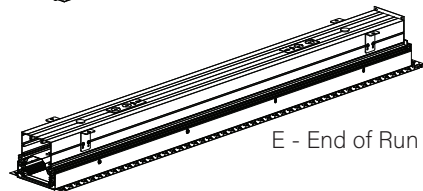

E - End of Run

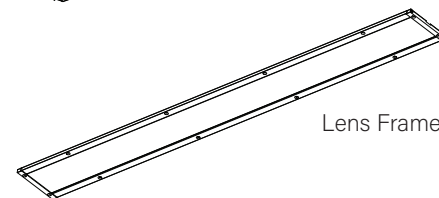

Lens Frame


SHIPPED INSTALLED



Tie-Wire Bracket Screw
(72010)
(8-18 x 1/4 SELF TAPPING SCREW)



Tie Wire Bracket
(12547)

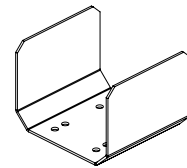

Joiner Bracket
(11849)

INCLUDED HARDWARE




Reflector Screw
(72026)
(6-20 X 1/4 Self-Tapping screw)



Backer Flange
(72001) (8-32X 3/8"
Washer Hex Head Screw)



Mud Flange (70005)
(8-32 X 5/16" Flat
Undercut Head Screw)

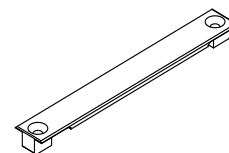

SPACER
(A66325-02)




TORX BIT
SCREW
(700719)






Use **T20 Torx Pin-In**
to fasten Torx Screws

CEILING PREPARATION

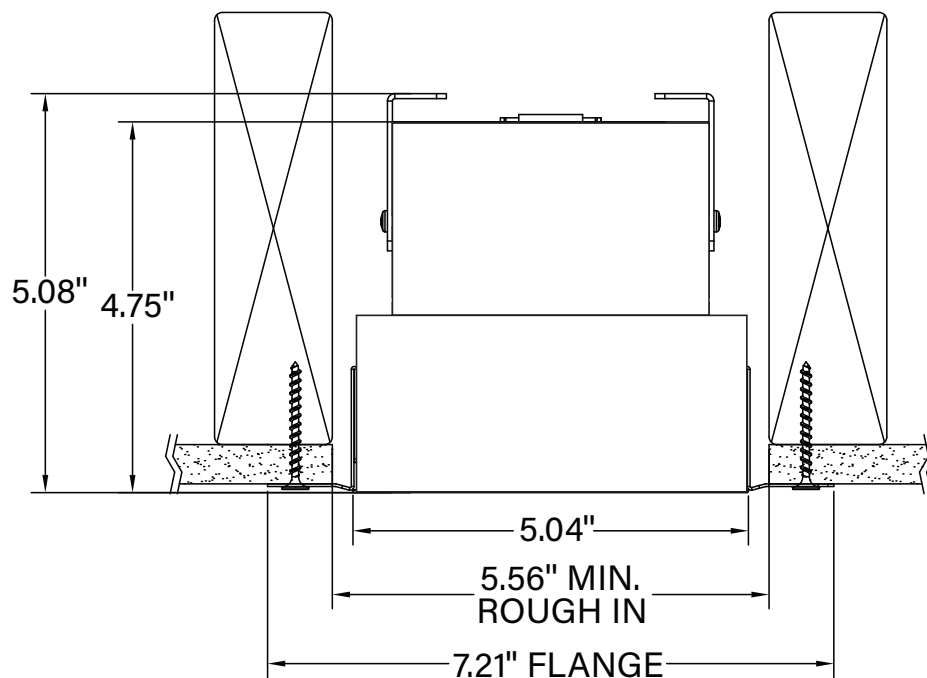


**2X6 FRAMING
REQUIRED ON BOTH
SIDES OF HOUSING**


PRE-DRYWALL INSTALLATION

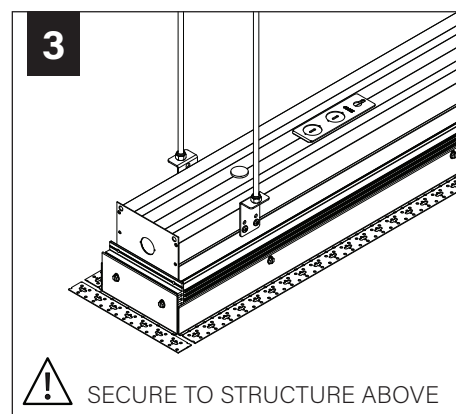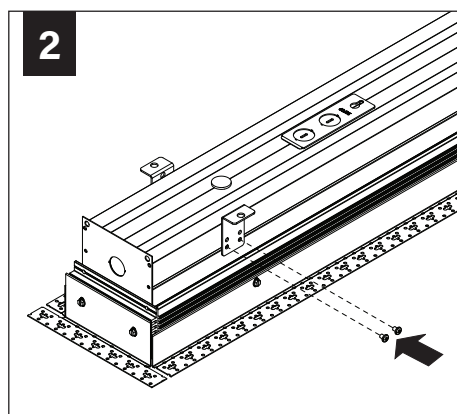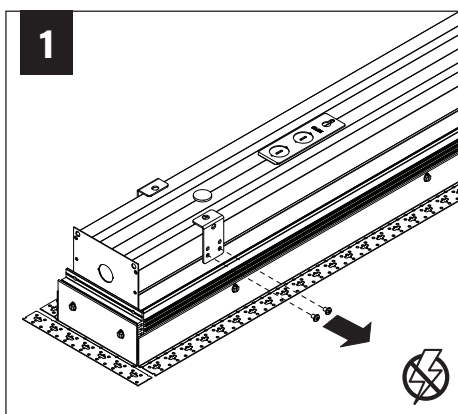






SECURE TO STRUCTURE ABOVE

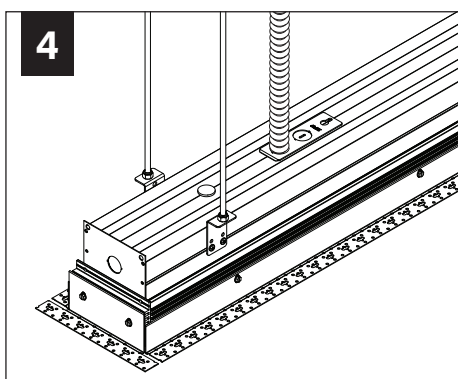






MAKE ELECTRICAL CONNECTIONS






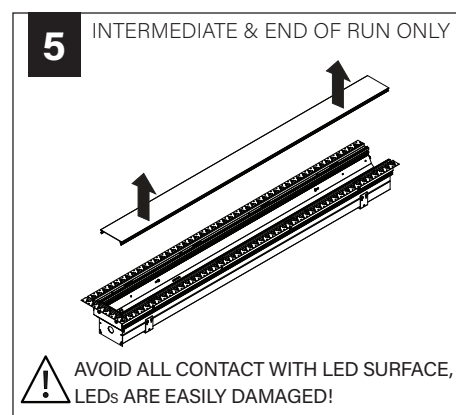


**AVOID ALL CONTACT WITH LED SURFACE,
LEDs ARE EASILY DAMAGED!**

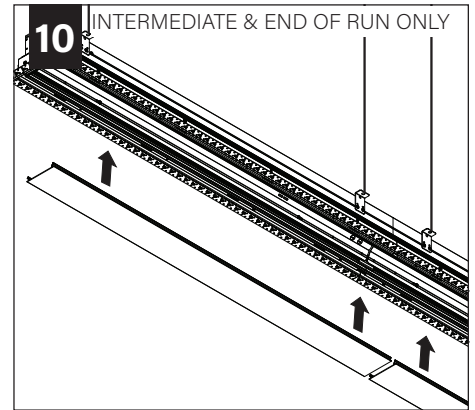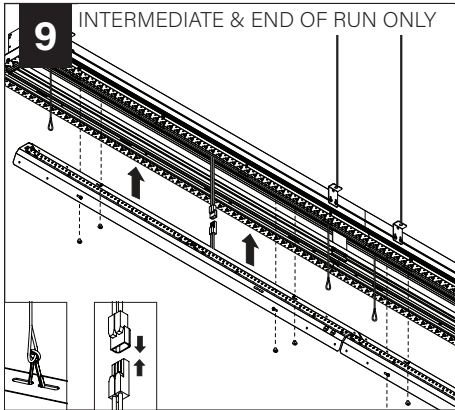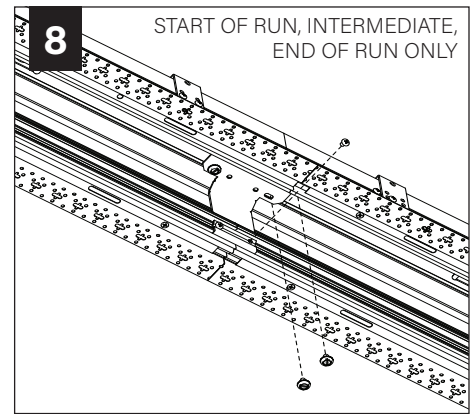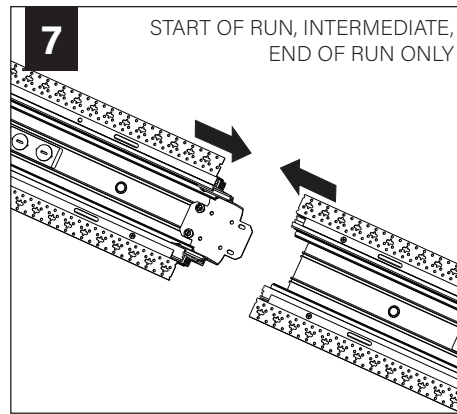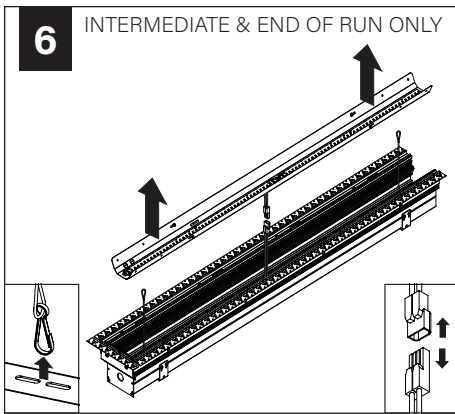

ASYMMETRIC LENS

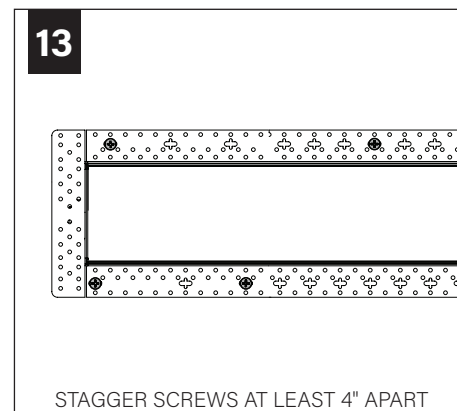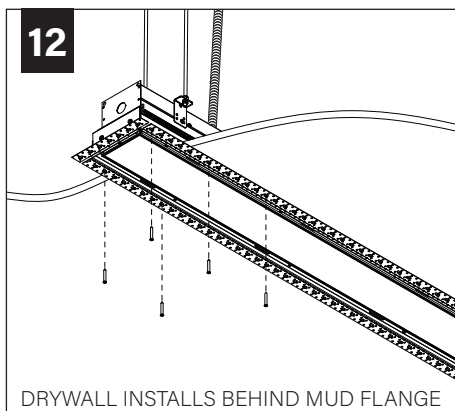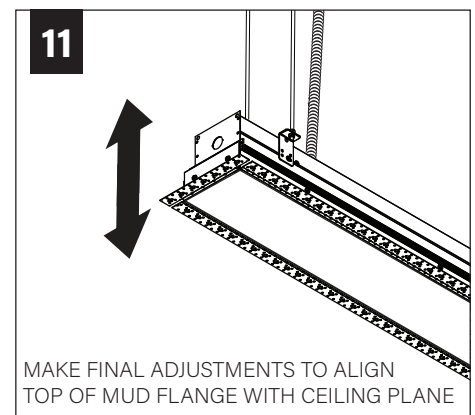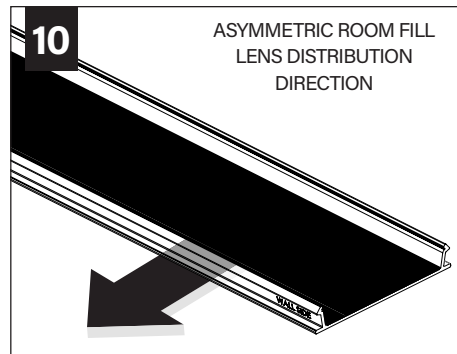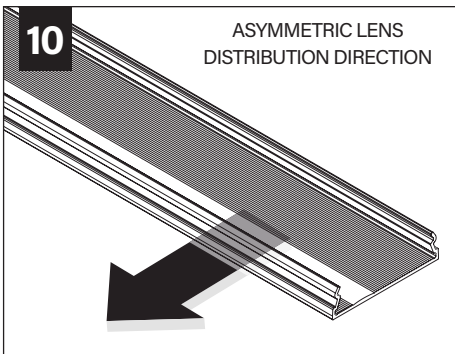


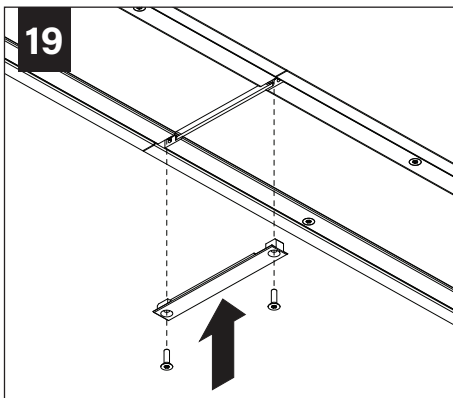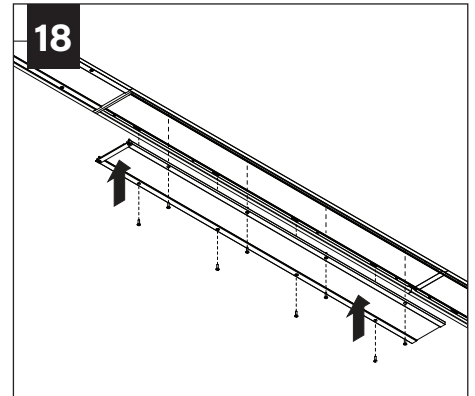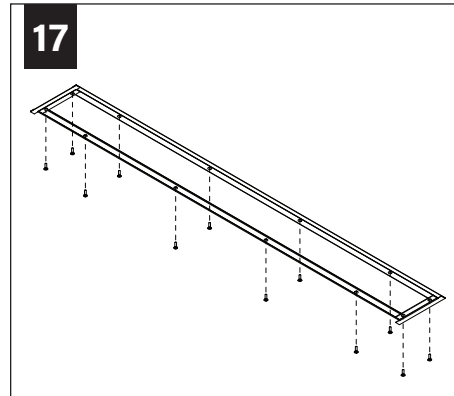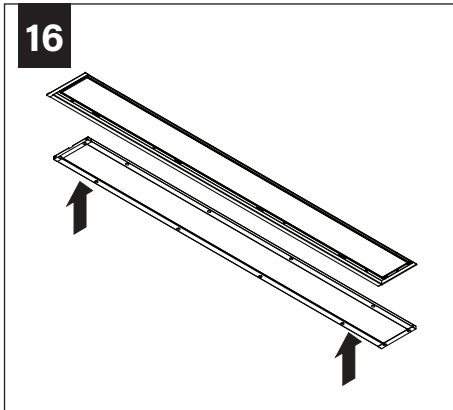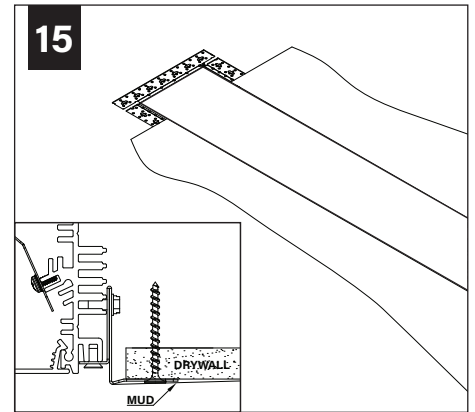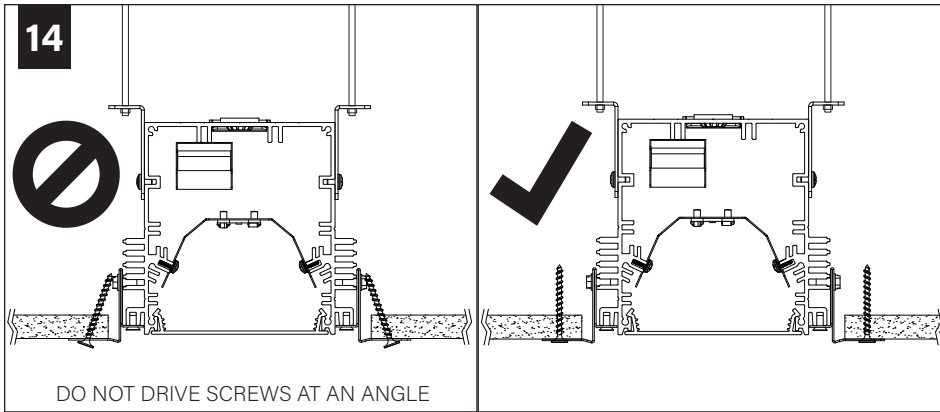


EMERGENCY








POST-DRYWALL INSTALLATION

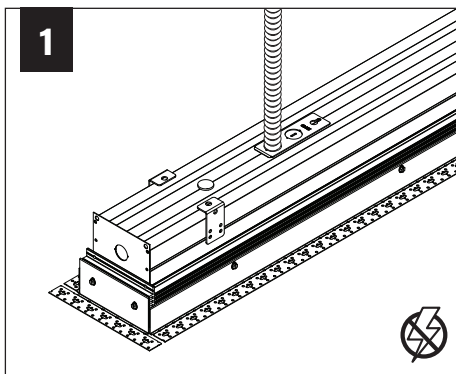


MAKE ELECTRICAL CONNECTION

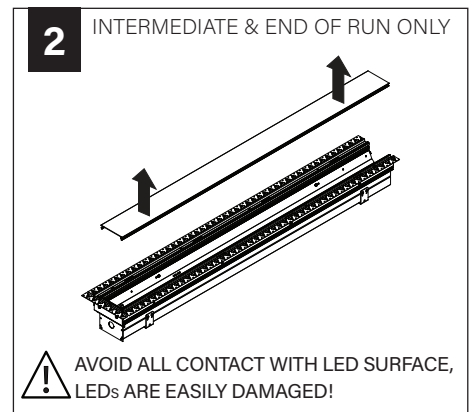


AVOID ALL CONTACT WITH LED SURFACE, LEDs ARE EASILY DAMAGED!

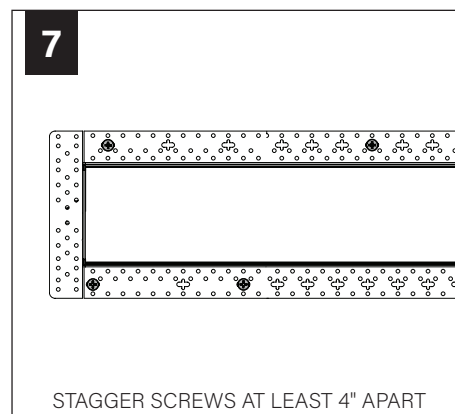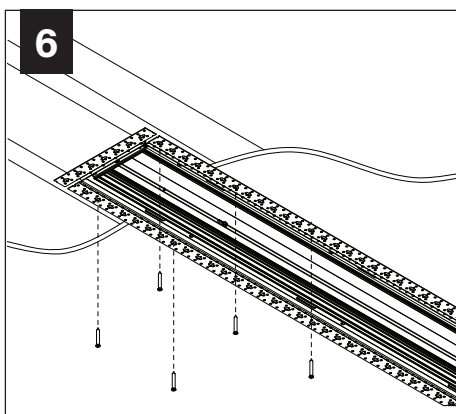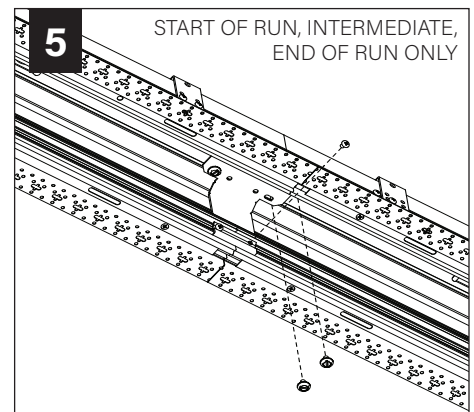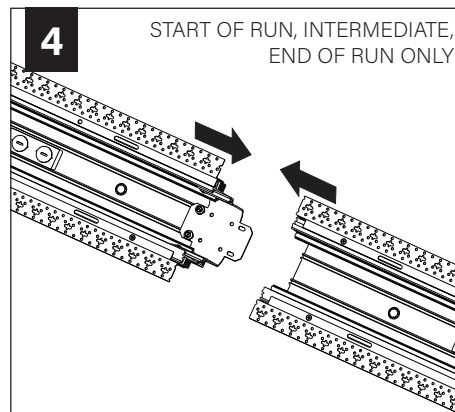
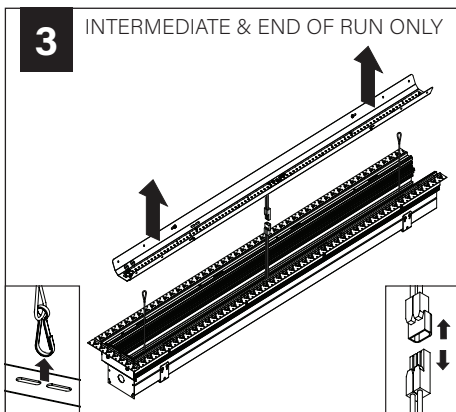


STAGGER SCREWS AT LEAST 4" APART







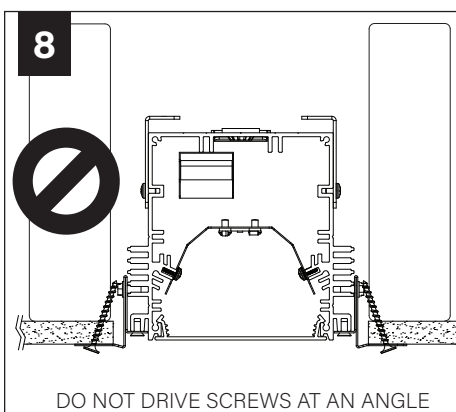


DO NOT DRIVE SCREWS AT AN ANGLE

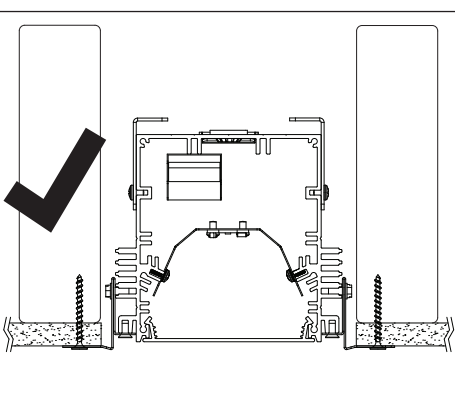

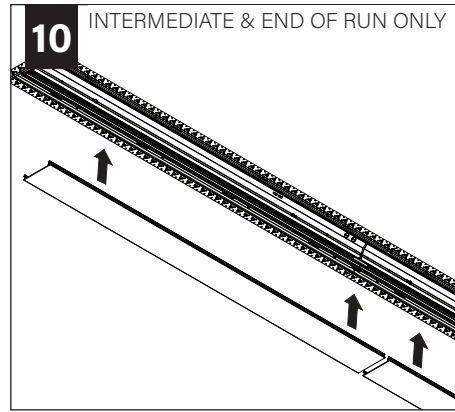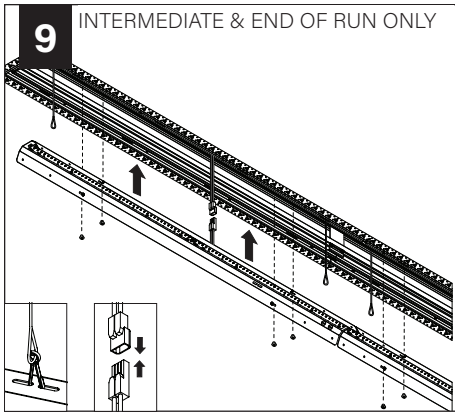

ASYMMETRIC LENS

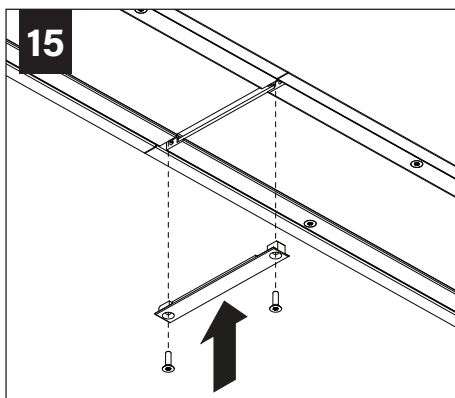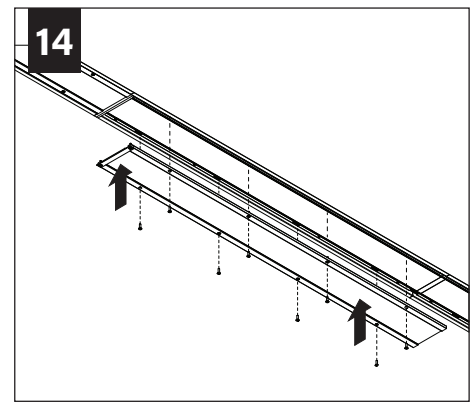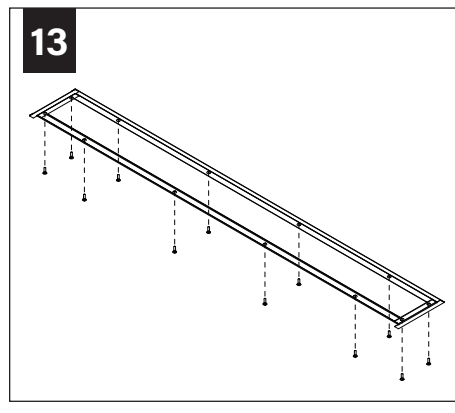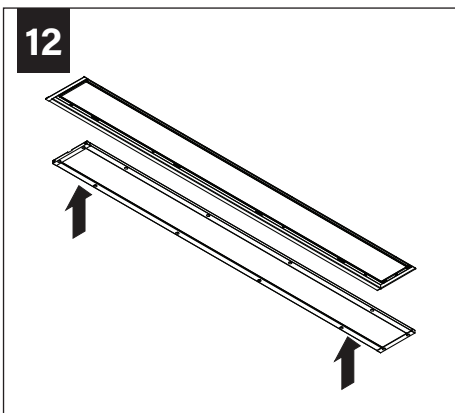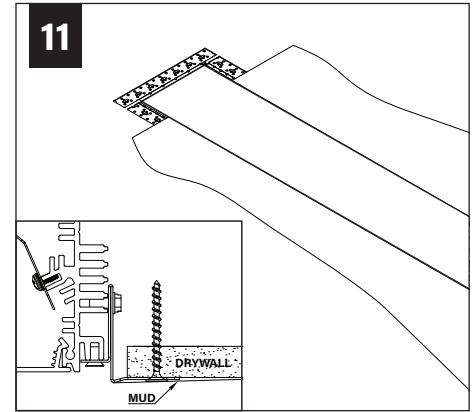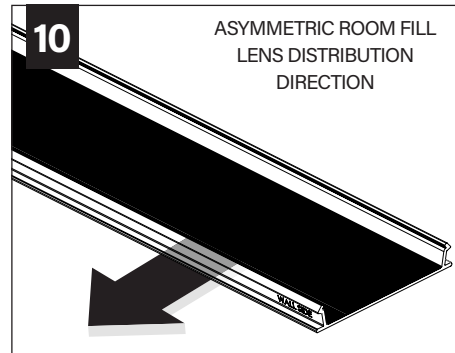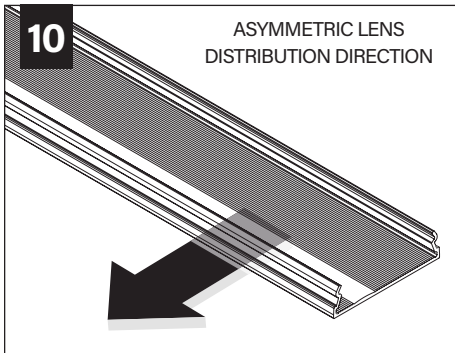

DRIVER SERVICE

