

Seem® 4 Behavioral Health

TRSM4PR-TF | PERIMETER TRIM FLANGE



FOCAL POINT®



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION



SEE ADDITIONAL INSTRUCTIONS




POWER OFF




POWER ON

COMPONENT KEY


FOCAL POINT

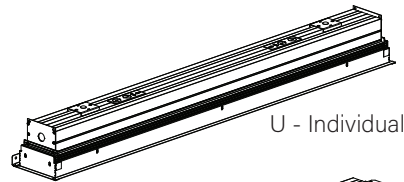


U - Individual

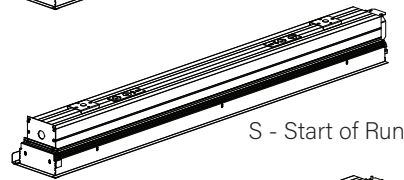

S - Start of Run

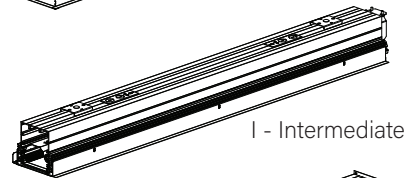


I - Intermediate

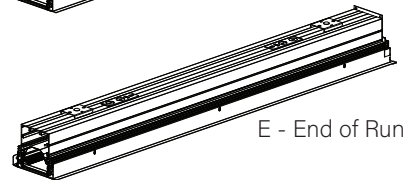


E - End of Run

ADDITIONAL PARTS

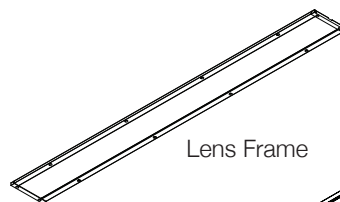



Lens Frame

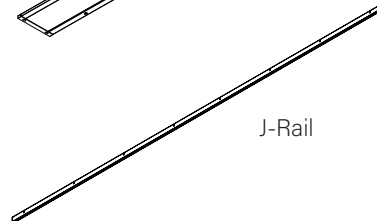


J-Rail

SHIPPED INSTALLED

Mounting Bracket Assembly

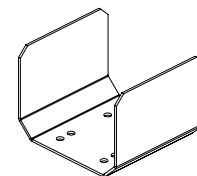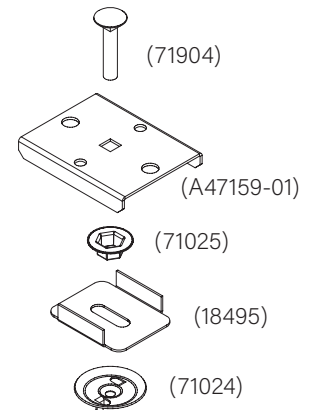

Joiner Bracket
(11849)




Joiner
Bracket
(11920)

INCLUDED HARDWARE



Reflector Screw
(72026)
(6-20 X 1/4 Self-Tapping screw)

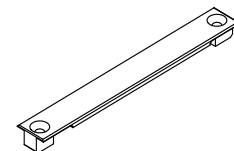

SPACER
(A66325-02)



TORX BIT
SCREW
(700719)



Use **T20 Torx Pin-In**
to fasten Torx Screws

MOUNTING LOCATIONS

STANDARD HOUSINGS



START OF RUN/INDIVIDUAL




INTERMEDIATE/END OF RUN

HOUSING LENGTH	A	B	C
2'	3"	17"	18"
3'	6"	23"	24"
4'	6"	35"	36"
5'	6"	47"	48"
6'	6"	59"	60"
7'	6"	71"	72"
8'	6"	83"	84"



MOUNTING LOCATION CHART IS AN APPROXIMATE GUIDE ONLY.

WALL/CEILING PREPARATION

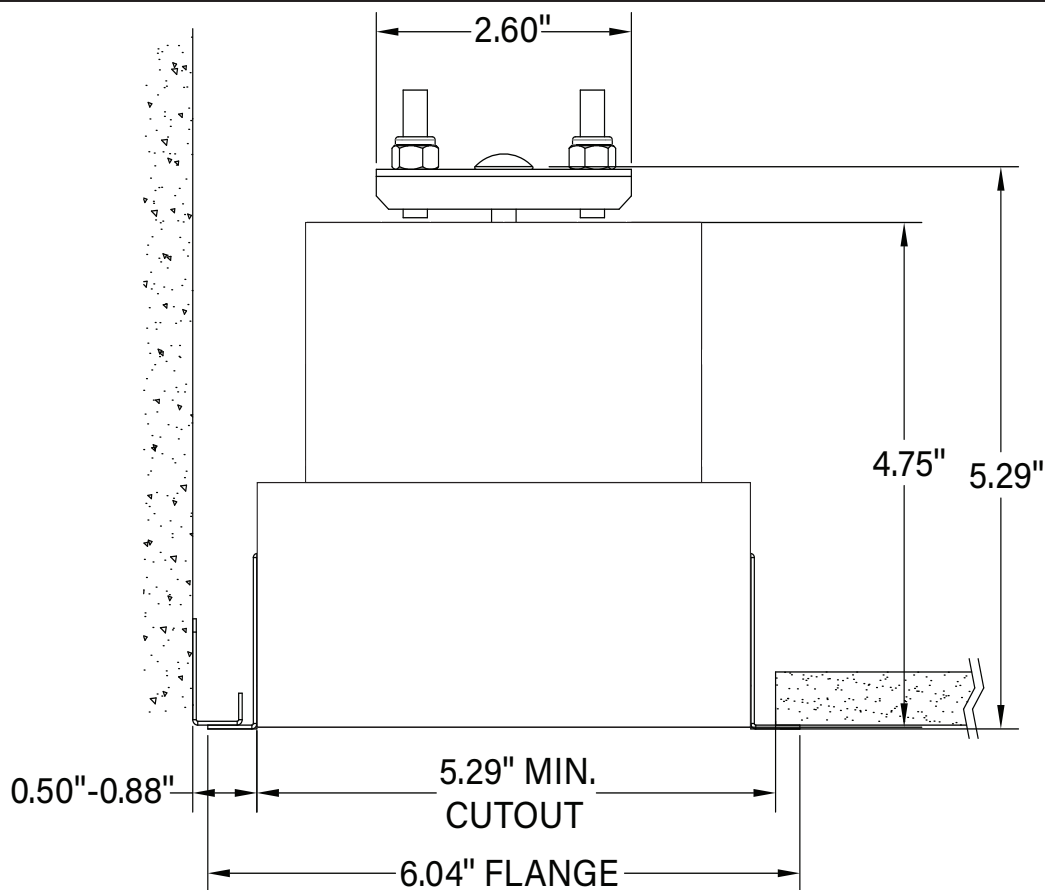

MOUNTING BRACKET MUST BE INSTALLED PRIOR TO DRYWALL













MOUNTING BRACKET MUST BE SECURED TO STRUCTURE ABOVE.

1/4" - 20 CARRIAGE BOLT MAY BE SUPPLIED BY OTHERS FOR GREATER ADJUSTABILITY.

CEILING CUTOUT LENGTH = NOMINAL RUN LENGTH PLUS 3/8" (+/- 1/16")


EXAMPLE: 12' RUN LENGTH = 12' 3/8" CUTOUT LENGTH

BASIC INSTALLATION

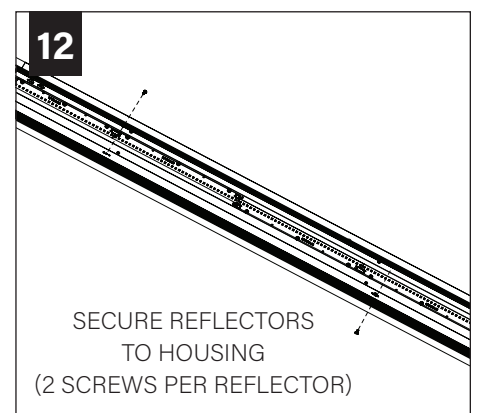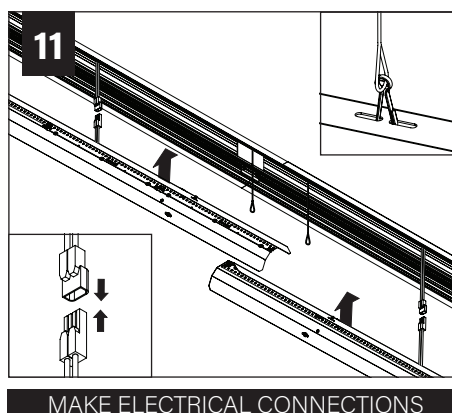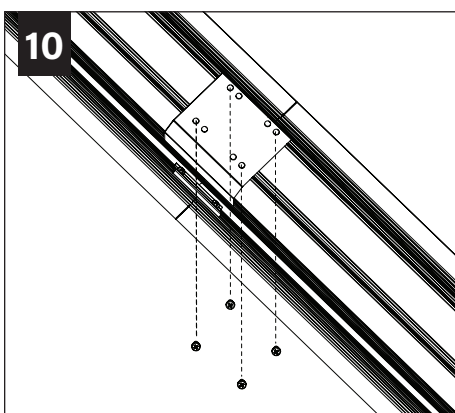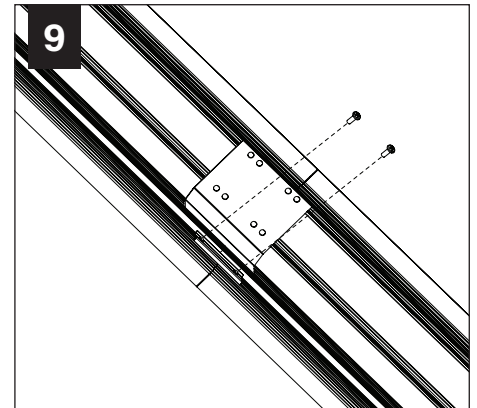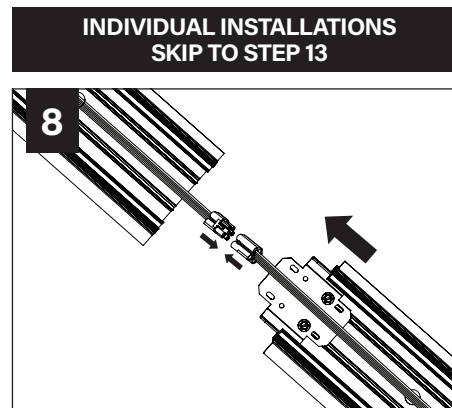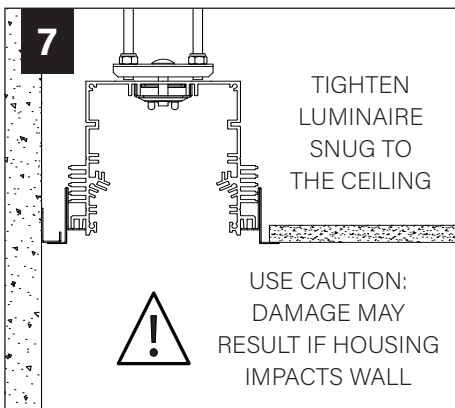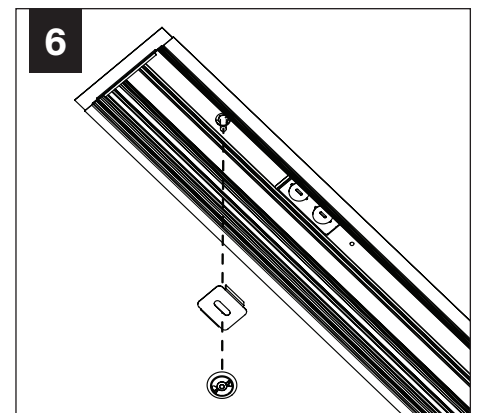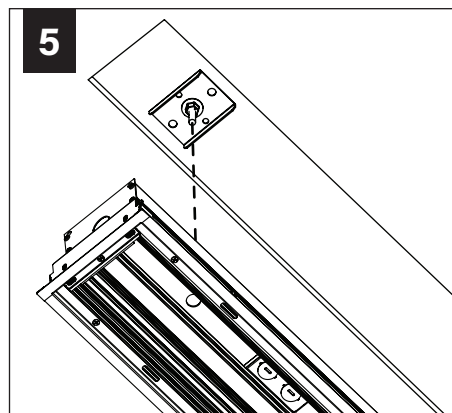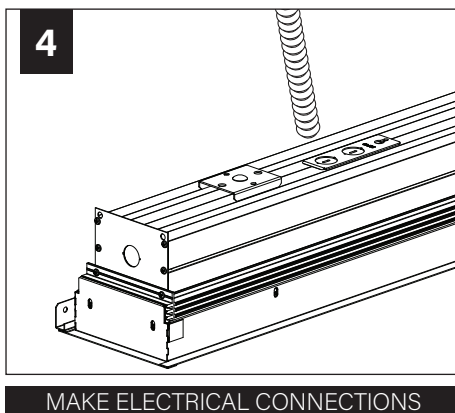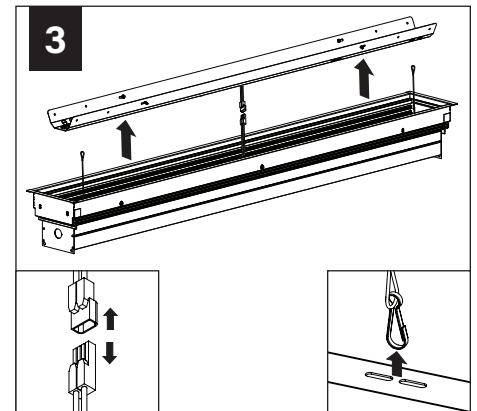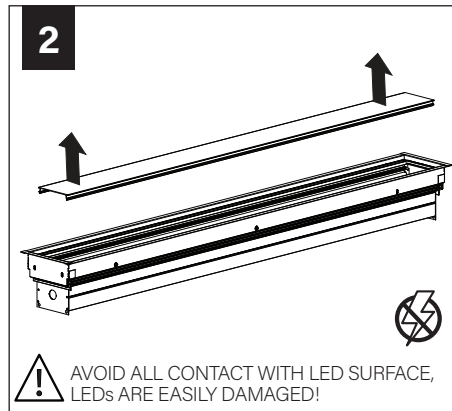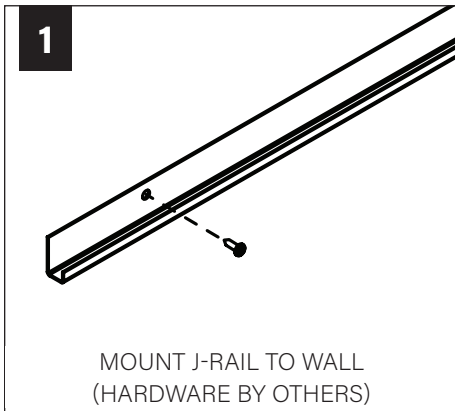


REPEAT STEPS 2-13 FOR EACH HOUSING SECTION


13

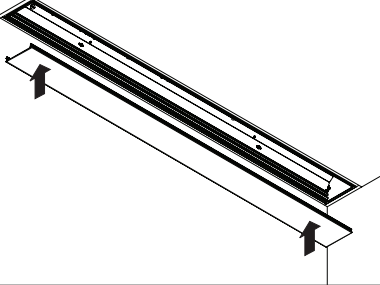


I

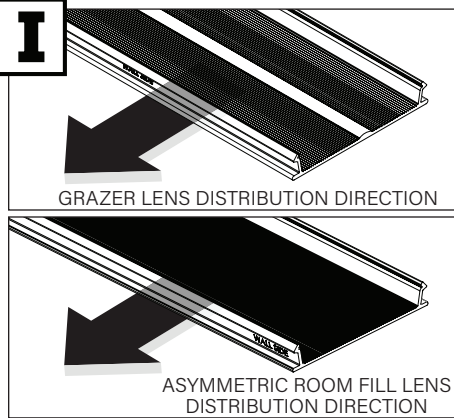


15

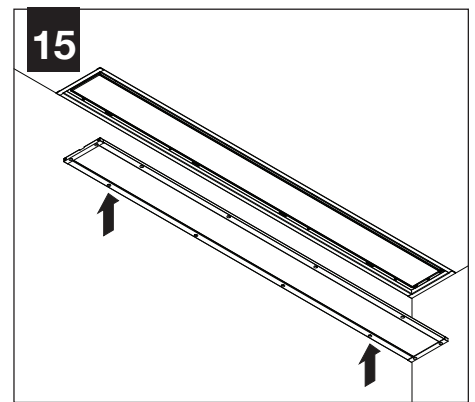


16

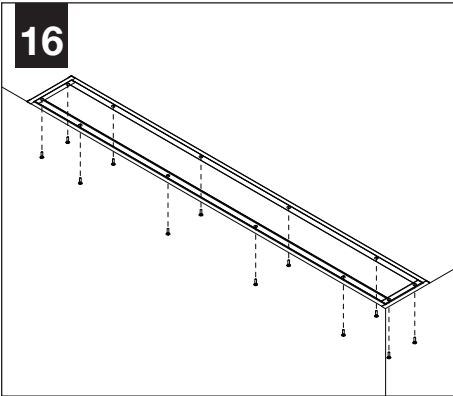

17

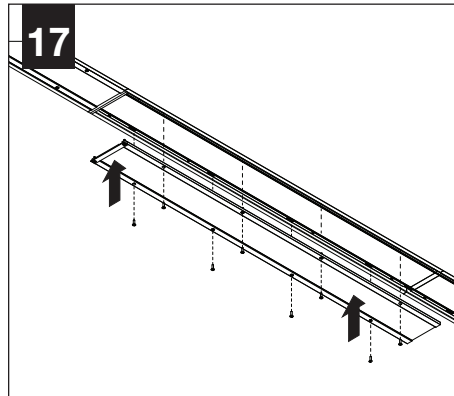

18

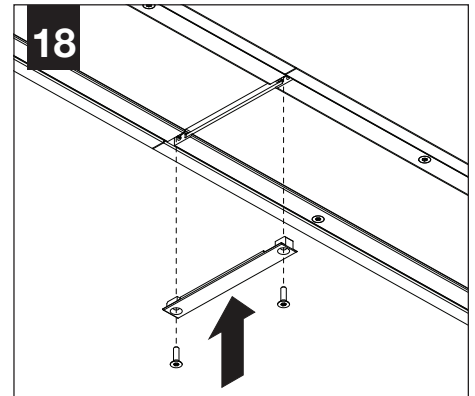

ALL FIXTURES THAT CAN BE REACHED
BY PATIENTS SHALL BE SECURED
TIGHTLY TO THE CEILING SURFACE
AND THE FLANGE EDGE SEALED
WITH PICK-RESISTANT CAULK.

EMERGENCY

I


SEE BATTERY MANUFACTURER
INSTRUCTIONS

EMERGENCY MAXIMUM MOUNTING HEIGHT
FROM FLOOR TO SURFACE OF LENS:


19.20'

DRIVER SERVICE

1

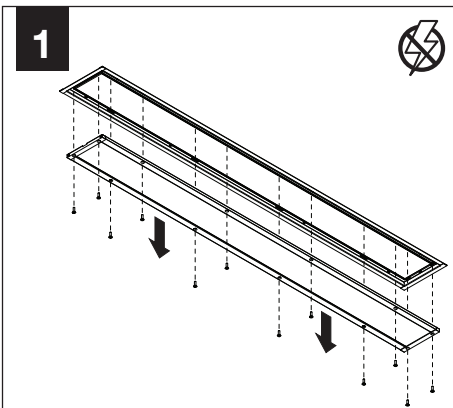

2

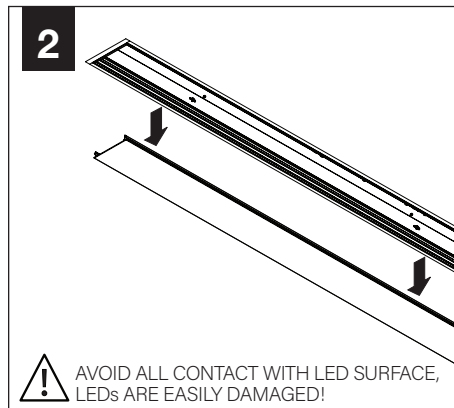

AVOID ALL CONTACT WITH LED SURFACE,
LEDs ARE EASILY DAMAGED!

3

