

# Seem Sweep™ 2

Surface Mount | FSS2S-SM



FOCAL POINT®



## BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

## INSTRUCTION KEY



**ATTENTION**



**SEE ADDITIONAL INSTRUCTIONS**



**POWER OFF**




**POWER ON**


## COMPONENT KEY

### FOCAL POINT

#### STRAIGHT HOUSINGS

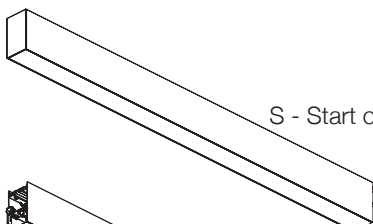

S - Start of Run

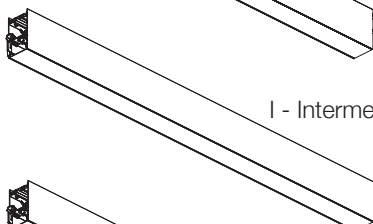

I - Intermediate




E - End of Run



Flush Lens

#### CURVED HOUSINGS

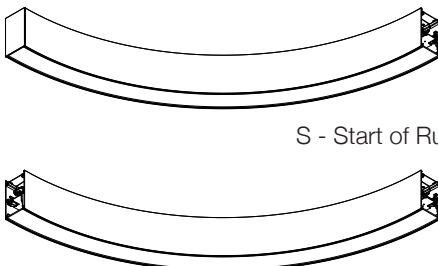

S - Start of Run



I - Intermediate



E - End of Run




Flush Lens

### SHIPPED INSTALLED



Reflector Screw  
(72026)

(6-32 x 1/4 self tapping screw)

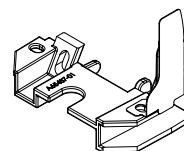

Joiner Bracket Light  
Blocker Assembly

Joiner (A65487-01)  
Joining Screw (700309)  
Light Blocker (A65788-01)  
Mounting Screw (700355)

### SHIPPED IN HARDWARE BAG




Extra Joining Screw  
(700309)





Extra Gripper Bracket  
Mounting Screw (72093)

## 90-DEGREE MOUNTING

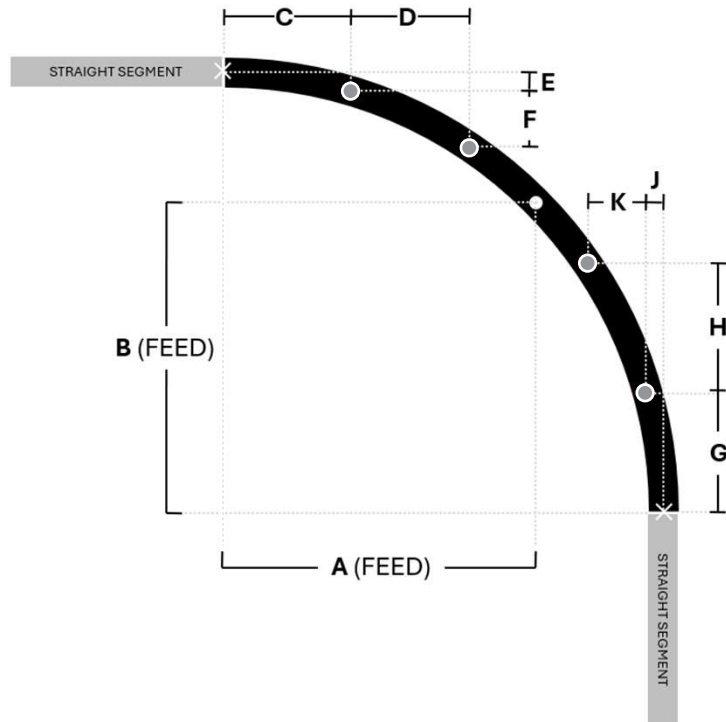









	A	B	C	D	E	F	G	H	J	K
12"	7.55	7.55	1.50	N/A	0.11	N/A	1.50	N/A	0.11	N/A
18"	9.49	13.72	1.50	N/A	0.07	N/A	1.50	N/A	0.07	N/A
24"	13.78	18.01	1.50	N/A	0.05	N/A	1.50	N/A	0.05	N/A
30"	20.28	20.28	1.50	14.98	0.04	5.17	1.50	14.98	0.04	5.17
36"	24.52	24.52	1.50	19.05	0.03	6.72	1.50	19.05	0.03	6.72
48"	30.82	35.06	11.87	14.48	1.53	6.62	11.87	14.48	1.53	6.62
60"	41.49	41.49	11.92	15.03	1.22	5.33	11.92	15.03	1.22	5.33

## LINEAR MOUNTING

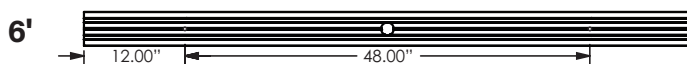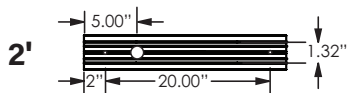

Feed location is always centered in housing, with the exception of the 2' housing.

Use single device cover or single gang handy box and mounting hardware (by others).

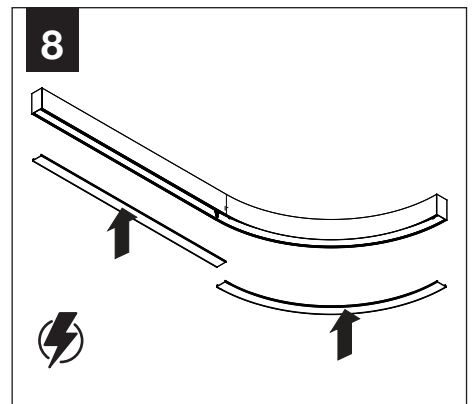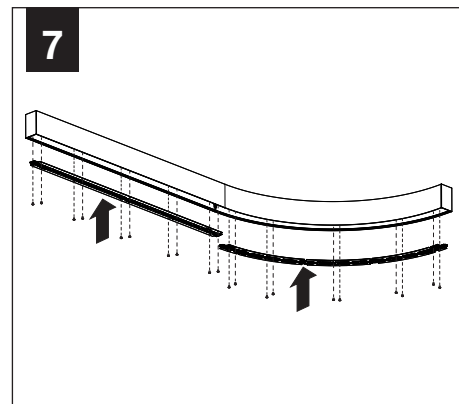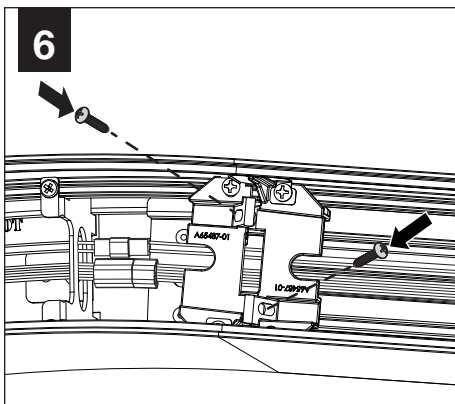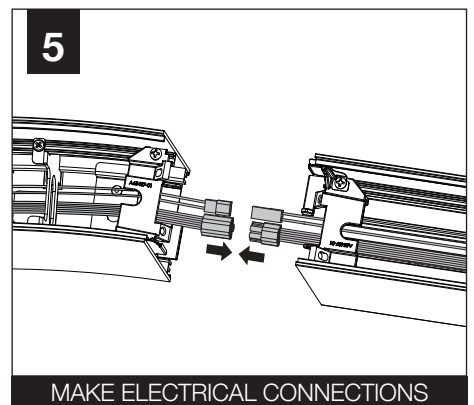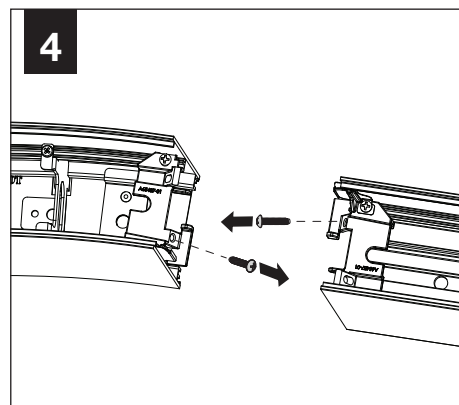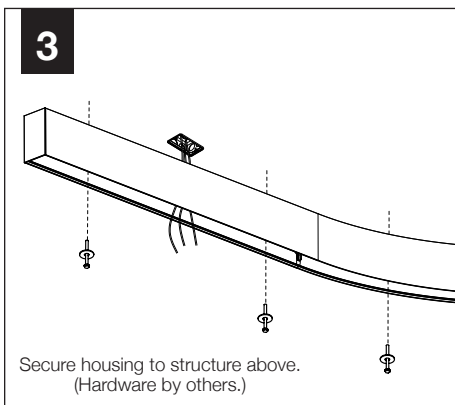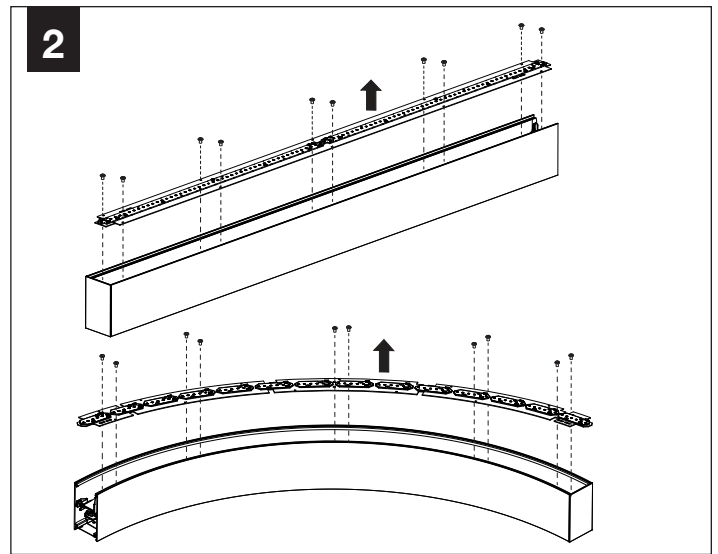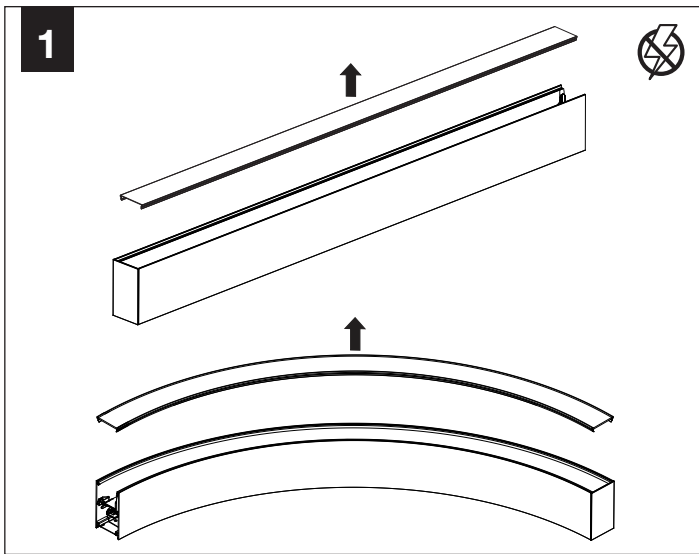

## DRIVER SERVICE

