Seem® 2 Mud-In-Drywall

FSM2L-XF

FOCAL POINT®

BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY

ATTENTION

SEE ADDITIONAL INSTRUCTIONS

POWER OFF

POWER ON

COMPONENT KEY

FOCAL POINT



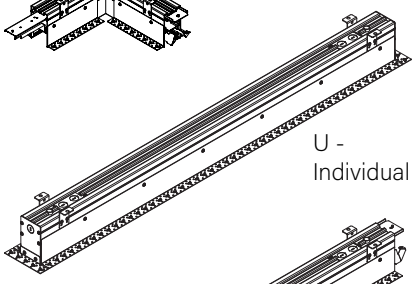

U -
Individual

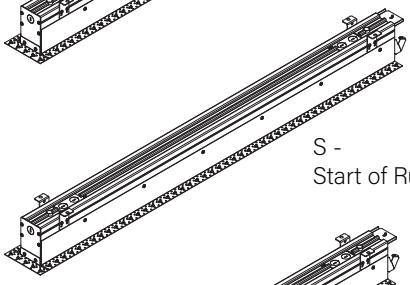

S -
Start of Run

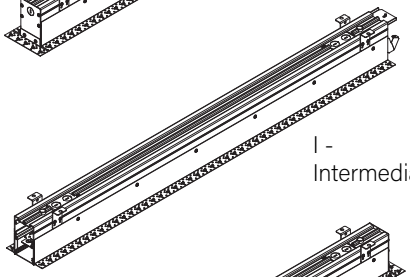

I -
Intermediate

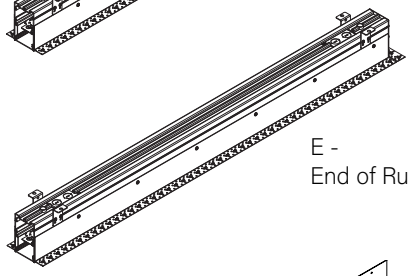

E -
End of Run

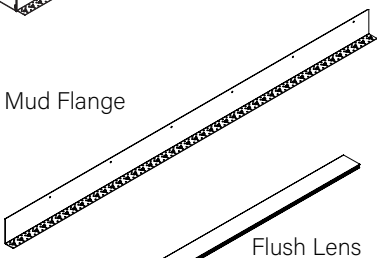

Mud Flange

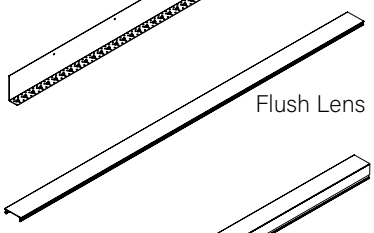

Flush Lens

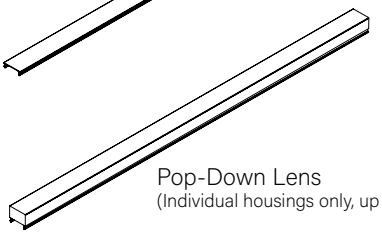

Pop-Down Lens
(Individual housings only, up to 8')

PARTS SHIPPED INSTALLED

Reflector Screw
(72010)
(8-18 x 1/4 self tapping screw)

Tie-Wire Bracket Screw
(72010)
(8-18 x 1/4 self tapping screw)

Mud Flange Screw
(70005)
(8-32 X 5/16" flat undercut head screw)



Tie-Wire Bracket
(12547)

Joiner Screw
(72074)

Joiner Washer
(700158)

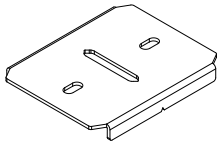

Joiner Bracket
(A63039-01)

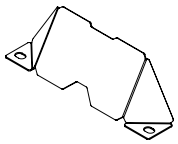

Joiner Blocker
(A48495-01-WH)



Spacer
(A64945-01)

SEE **PAGES 2-3** FOR
POST-DRYWALL INSTALLATION

SEE **PAGES 3-5** FOR
PRE-DRYWALL INSTALLATION

©2024 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

POST-DRYWALL INSTALLATION

2"X6" FRAMING REQUIRED ON BOTH SIDES OF HOUSING

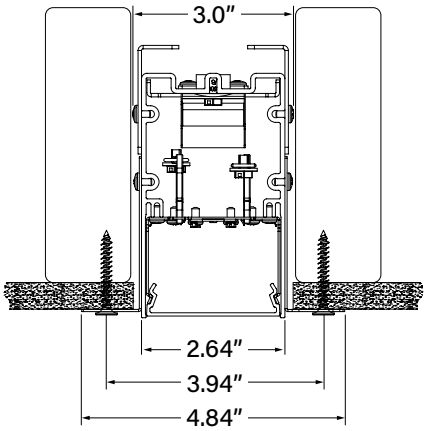

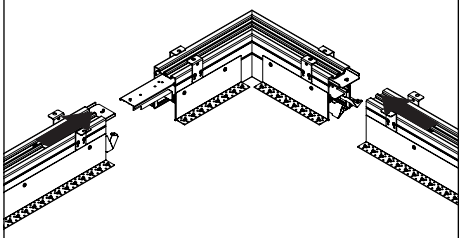

CORNER UNIT MUST BE ASSEMBLED PRIOR TO CEILING INSTALLATION.

1

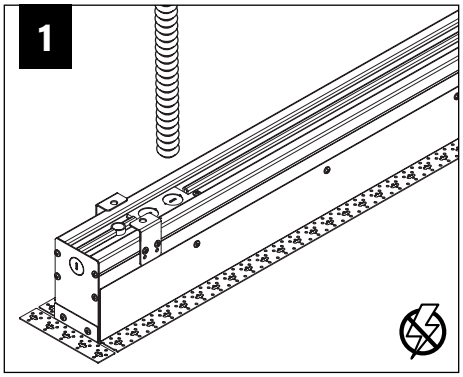

MAKE ELECTRICAL CONNECTION

INDIVIDUAL INSTALLATIONS SKIP TO STEP 7

2 INTERMEDIATE & END OF RUN ONLY

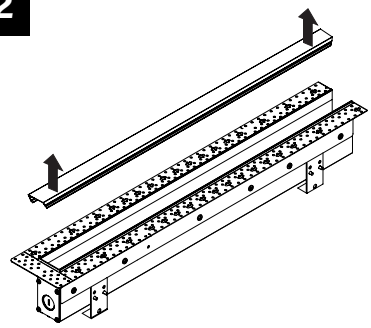

AVOID ALL CONTACT WITH LED SURFACE, LEDS ARE EASILY DAMAGED!

3 INTERMEDIATE & END OF RUN ONLY

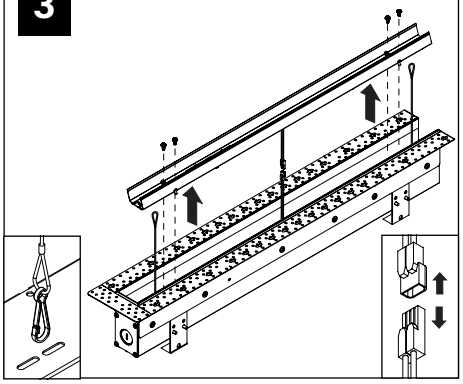

4 INSTALL SPACERS

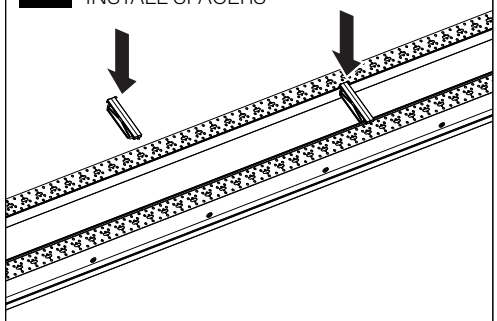

SOLID REGRESS HOUSING UNITS ONLY

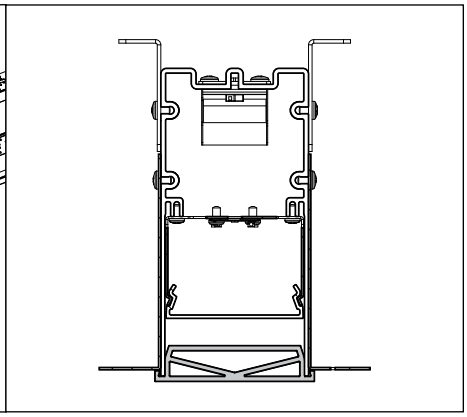

5

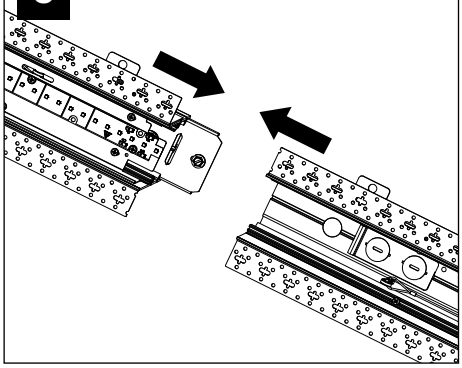

6 START OF RUN, INTERMEDIATE, END OF RUN ONLY

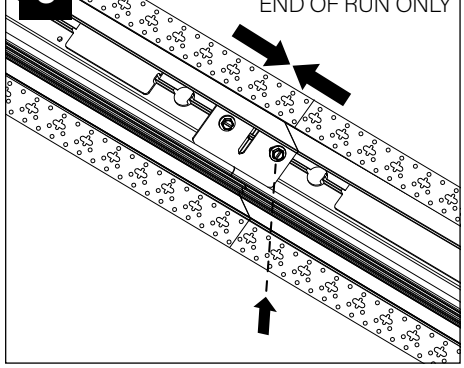

7

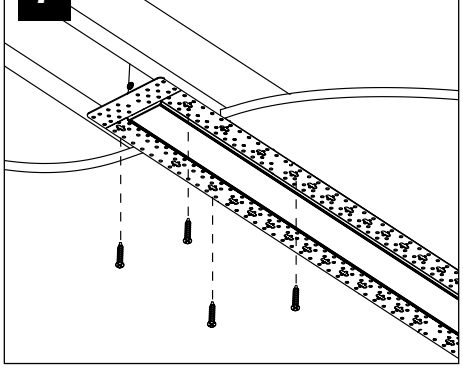

©2024 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

8

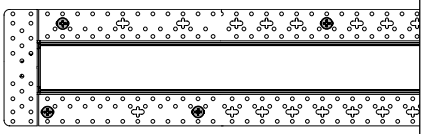

STAGGER SCREWS AT LEAST 4" APART

9

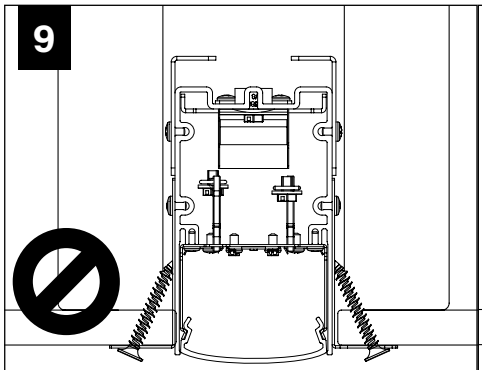

DO NOT DRIVE SCREWS AT AN ANGLE

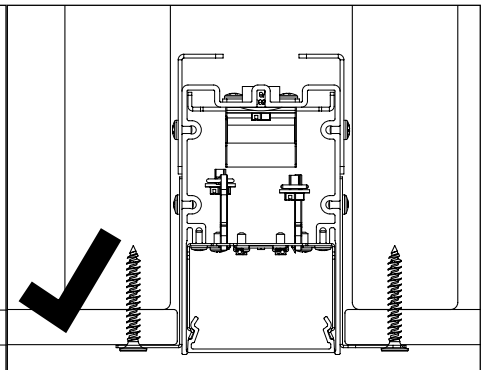

10 REMOVE SPACERS

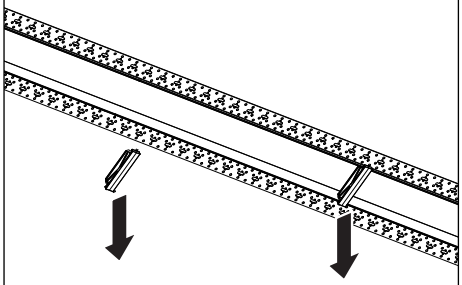

SOLID REGRESS HOUSING UNITS ONLY

11

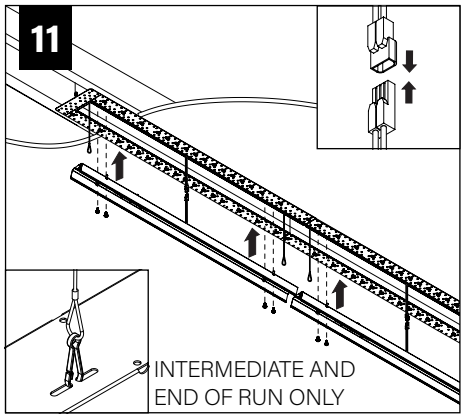

INTERMEDIATE AND
END OF RUN ONLY

12

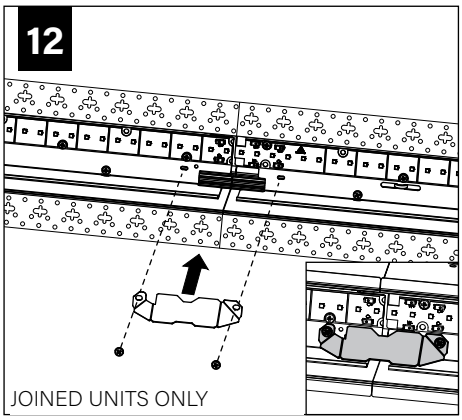

JOINED UNITS ONLY

13

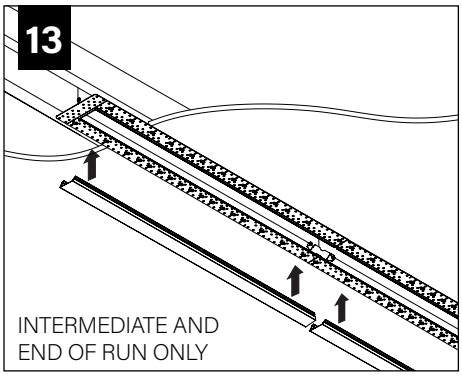

INTERMEDIATE AND
END OF RUN ONLY

FLUSH LENS

13

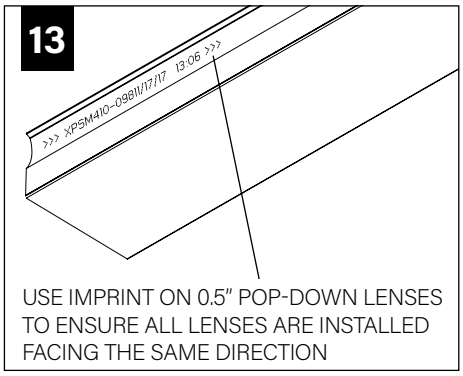

USE IMPRINT ON 0.5" POP-DOWN LENSES
TO ENSURE ALL LENSES ARE INSTALLED
FACING THE SAME DIRECTION

POP-DOWN LENS

14

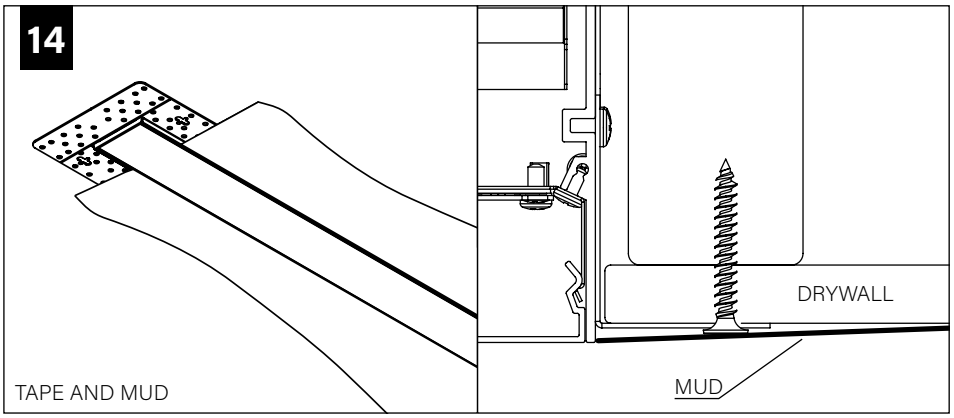

TAPE AND MUD

©2024 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

PRE-DRYWALL INSTALLATION

1

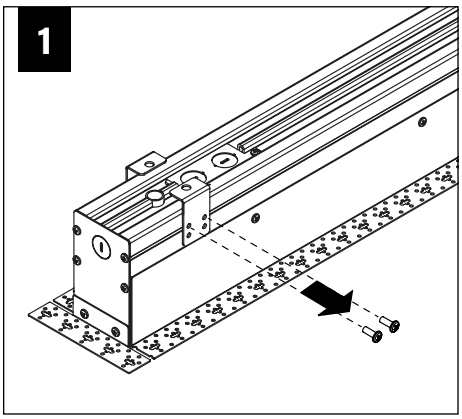

2

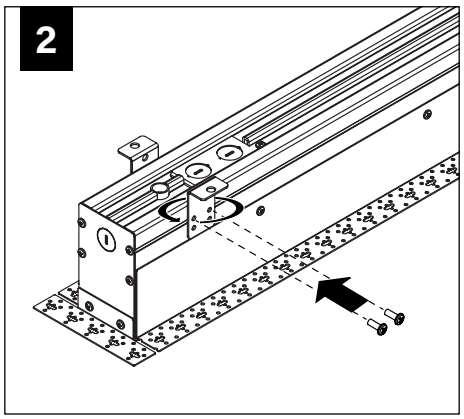

3

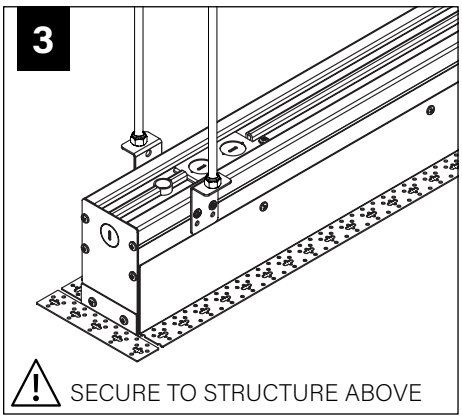

SECURE TO STRUCTURE ABOVE

4

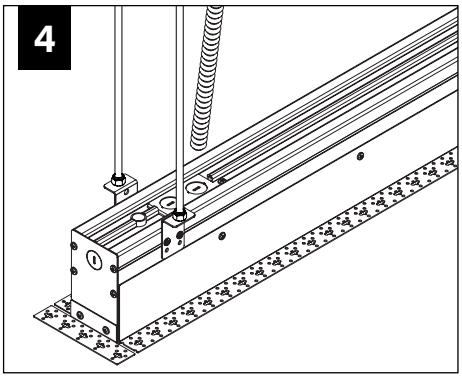

MAKE ELECTRICAL CONNECTION

INDIVIDUAL INSTALLATIONS
SKIP TO STEP 9

5 INTERMEDIATE & END OF RUN ONLY

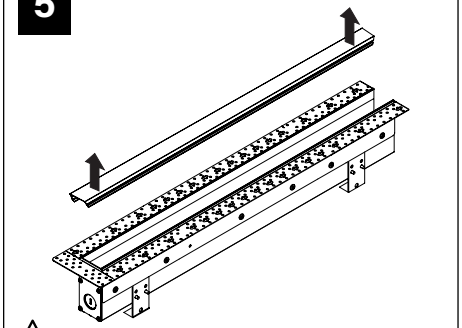

AVOID ALL CONTACT WITH LED SURFACE, LEDS ARE EASILY DAMAGED!

6 INTERMEDIATE & END OF RUN ONLY

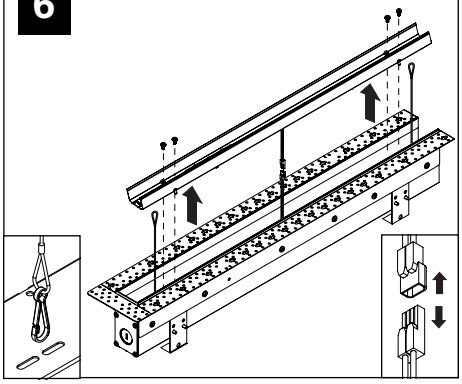

7

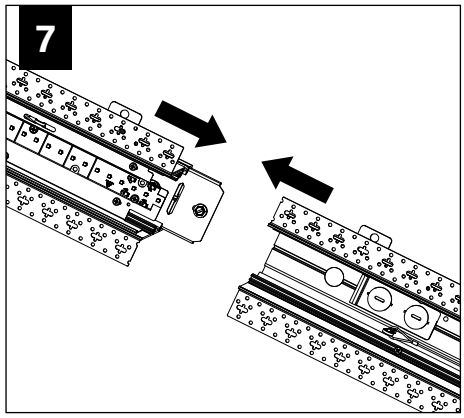

8 START OF RUN, INTERMEDIATE, END OF RUN ONLY

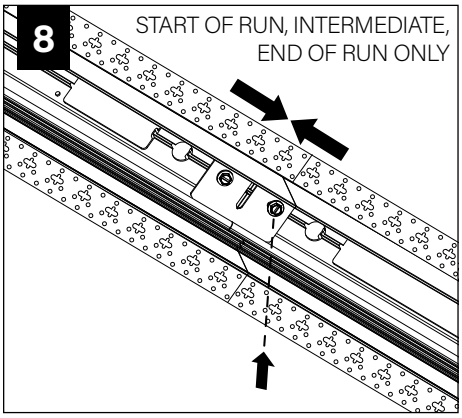

9

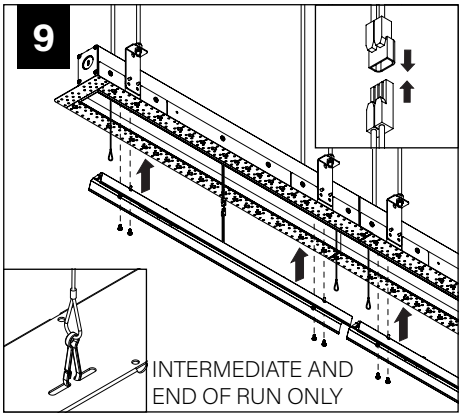

INTERMEDIATE AND END OF RUN ONLY

10

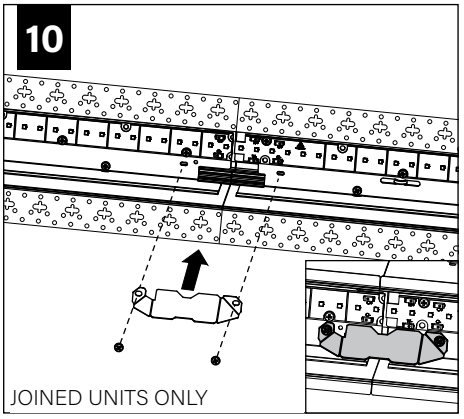

JOINED UNITS ONLY

11

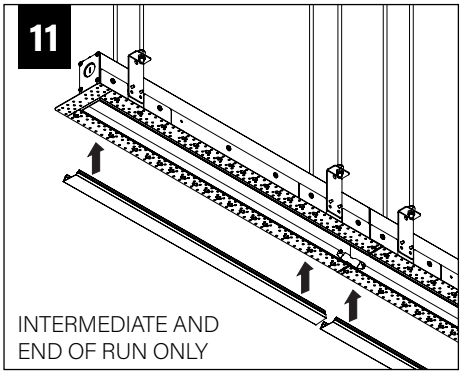

INTERMEDIATE AND END OF RUN ONLY

FLUSH LENS

©2024 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

12

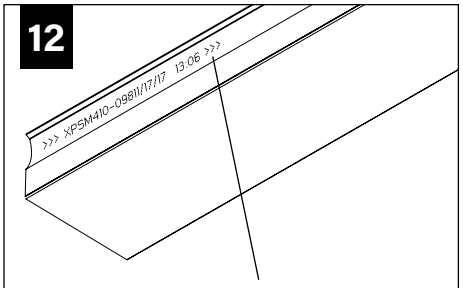

USE IMPRINT ON 0.5" POP-DOWN LENSES TO ENSURE ALL LENSES ARE INSTALLED FACING THE SAME DIRECTION

POP-DOWN LENS

LENS MUST BE INSTALLED PRIOR TO DRYWALL INSTALLATION

13

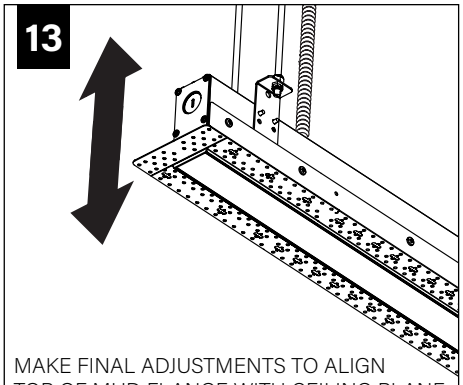

MAKE FINAL ADJUSTMENTS TO ALIGN TOP OF MUD FLANGE WITH CEILING PLANE

14 INSTALL SPACERS

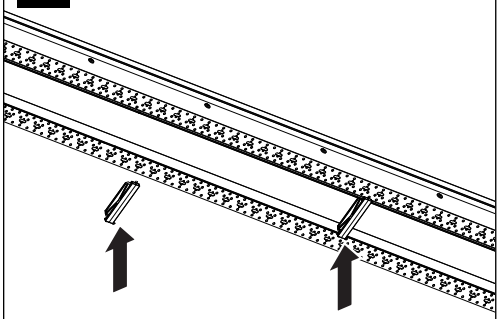

SOLID REGRESS HOUSING UNITS ONLY

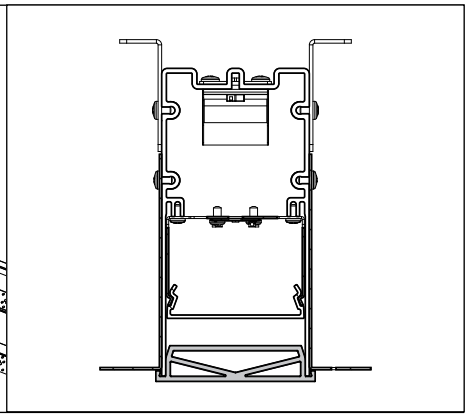

15

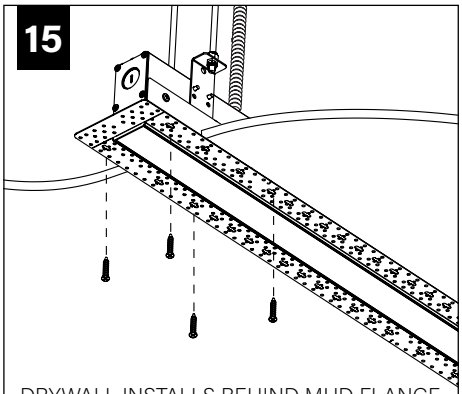

DRYWALL INSTALLS BEHIND MUD FLANGE

16

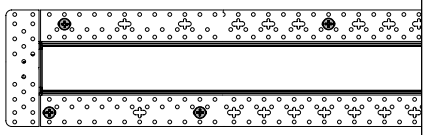

STAGGER SCREWS AT LEAST 4" APART

17

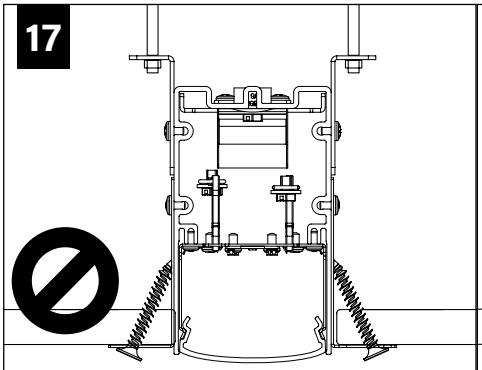

DO NOT DRIVE SCREWS AT AN ANGLE

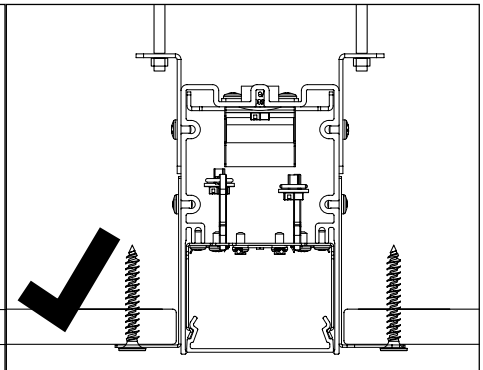

18 REMOVE SPACERS

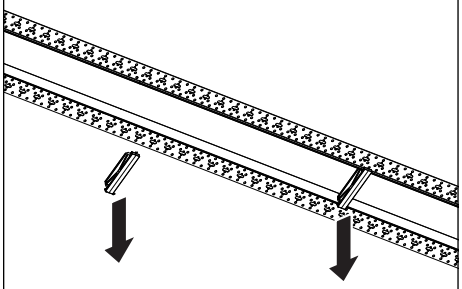

SOLID REGRESS HOUSING UNITS ONLY

19

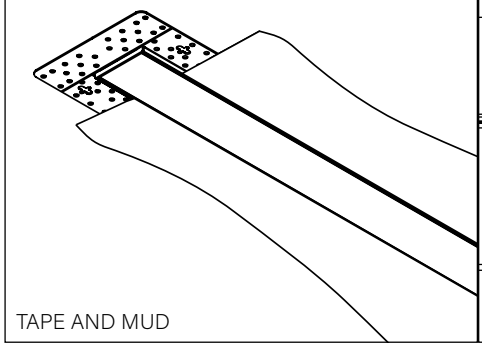

TAPE AND MUD

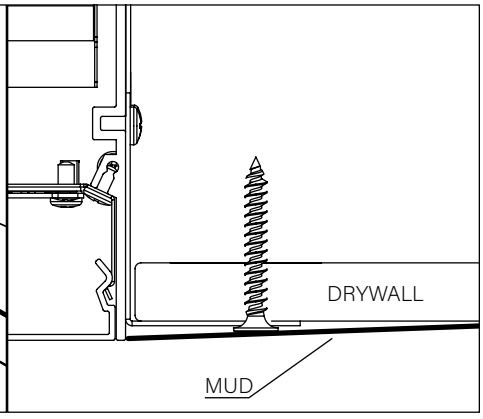

©2024 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference

DRIVER SERVICE

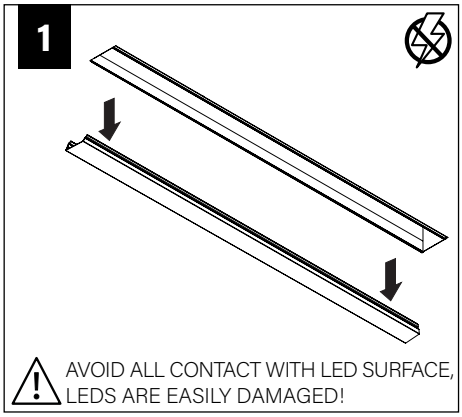

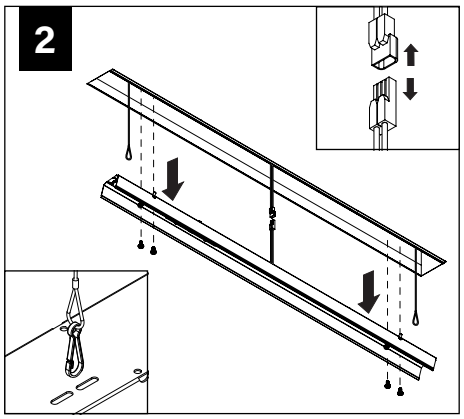

©2024 Focal Point, LLC | 4141 S. Pulaski Rd., Chicago, IL 60632 | www.focalpointlights.com/reference