Seem® 1 Acoustic

ASM1S | AUSM1S - Direct To Strut, Direct To Grid



FOCAL POINT



BEFORE YOU BEGIN

- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY



ATTENTION




SEE ADDITIONAL INSTRUCTIONS



POWER OFF



POWER ON

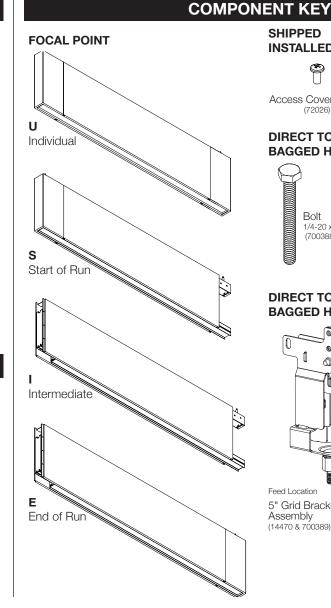

SHIPPED **INSTALLED**



Access Cover Screw (72026)

SHIPPED IN HARDWARE BAG




Joiner Screw (700295)

DIRECT TO STRUT BAGGED HARDWARE





DIRECT TO GRID BAGGED HARDWARE

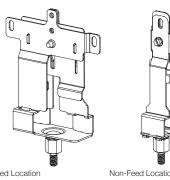

Feed Location 5" Grid Bracket Assembly (14470 & 700389)

2" Grid Bracket Assembly



POWER CABLE LENGTH 30"

#1 PHILLIPS DRIVER BIT

REQUIRED FOR INSTALLATION OF JOINED RUNS

INDIVIDUAL UNITS

CANNOT BE JOINED

IN THE FIELD

SEEM 1 ACOUSTIC UNITS

CANNOT BE CUT TO LENGTH

IN THE FIELD




DIRECT TO GRID **RUN LENGTHS** ARE LIMITED TO 16FT.


RUNS SHOULD BE JOINED ON A FLAT SURFACE BEFORE MOUNTING TO GRID.








DIRECT TO STRUT INSTALLATION

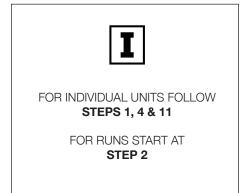


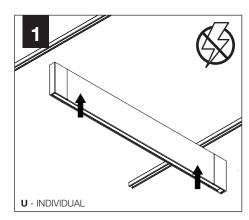


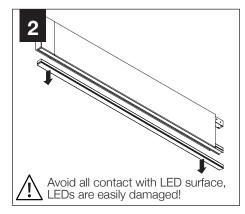


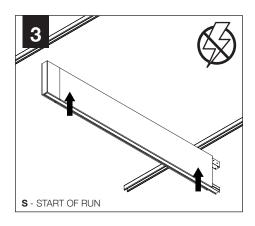


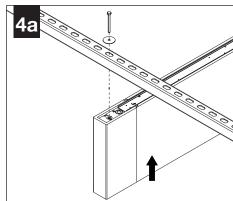


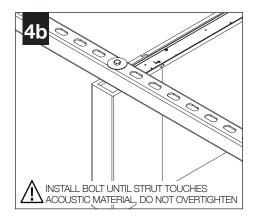


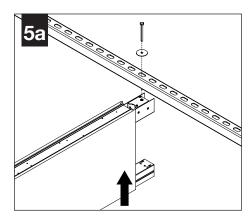


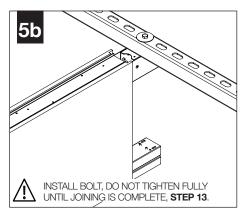

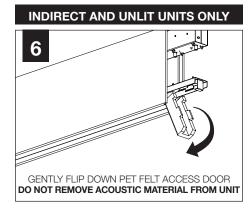


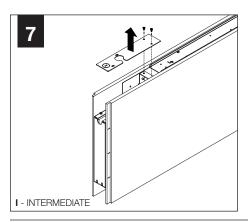


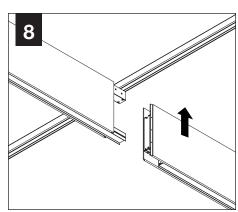


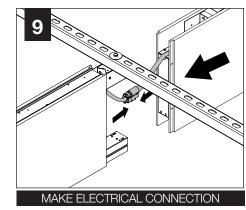



INDIRECT AND UNLIT UNITS ONLY

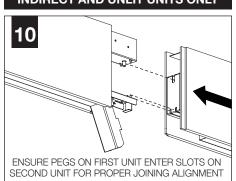

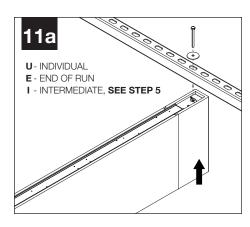

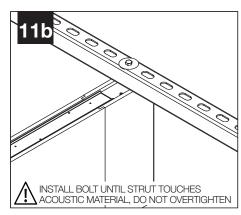


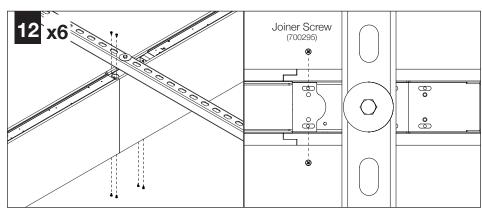


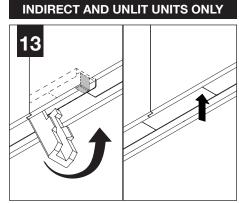



GENTLY FLIP UP PET FELT ACCESS DOOR UNTIL IT MEETS THE INTERNAL STOPPING MECHANISM


DO NOT APPLY EXCESSIVE PRESSURE

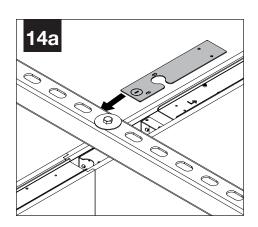

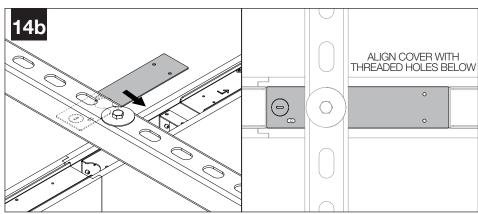

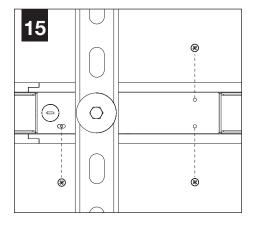

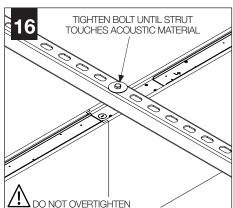

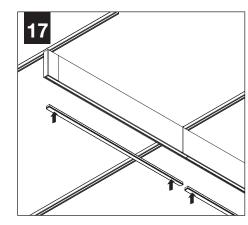


DIRECT TO STRUT - DRIVER SERVICE



HARDWARE PROVIDED FOR 1-5/8" STRUT HEIGHT.

CONTACT FOCAL POINT IF DIFFERENT HARDWARE IS REQUIRED FOR INSTALLATION.

Strut Height	Bolt: 1/4-20 x
13/16"	2.0"
7/8"	2.0"
1"	2.25"
1-3/8"	2.50"
1-5/8"	2.75"
2-7/16"	3.50"
3-1/4"	4.50"

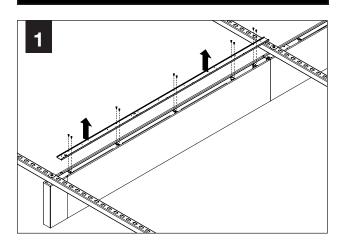

DIRECT TO GRID INSTALLATION




DIRECT TO GRID RUN LENGTHS ARE LIMITED TO 16FT.

RUNS SHOULD BE JOINED ON A FLAT SURFACE **BEFORE** MOUNTING TO GRID.





FOR INDIVIDUAL UNITS FOLLOW STEPS 9-18

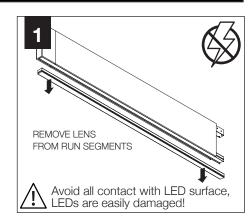


INDIRECT AND UNLIT UNITS ONLY




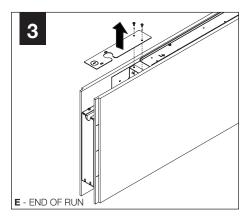


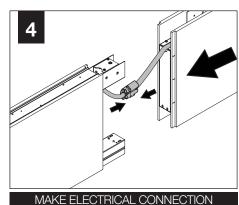


INDIRECT AND UNLIT UNITS ONLY

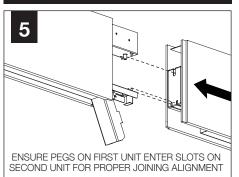

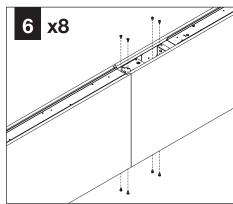

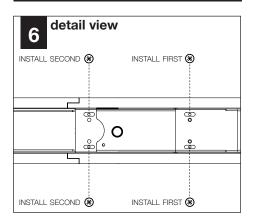


INDIRECT AND UNLIT UNITS ONLY

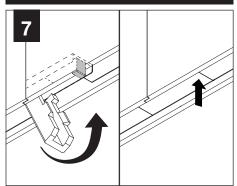



GENTLY FLIP UP PET FELT ACCESS DOOR UNTIL IT MEETS THE INTERNAL STOPPING MECHANISM


8

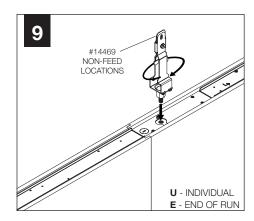



DO NOT APPLY EXCESSIVE PRESSURE

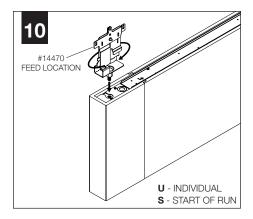


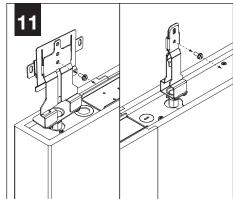


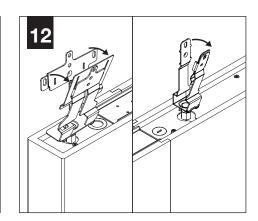


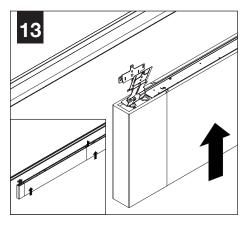


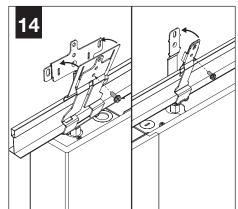


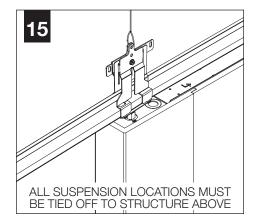

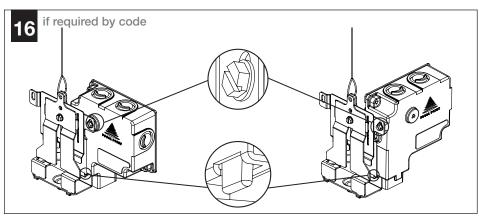

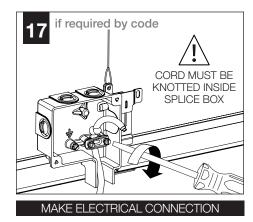

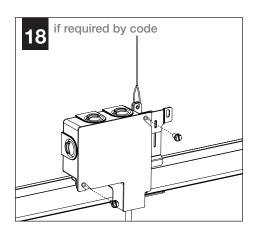

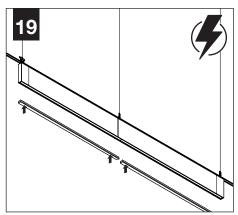

DRIVER SERVICE

